


9.2 EXTERIOR SECTION

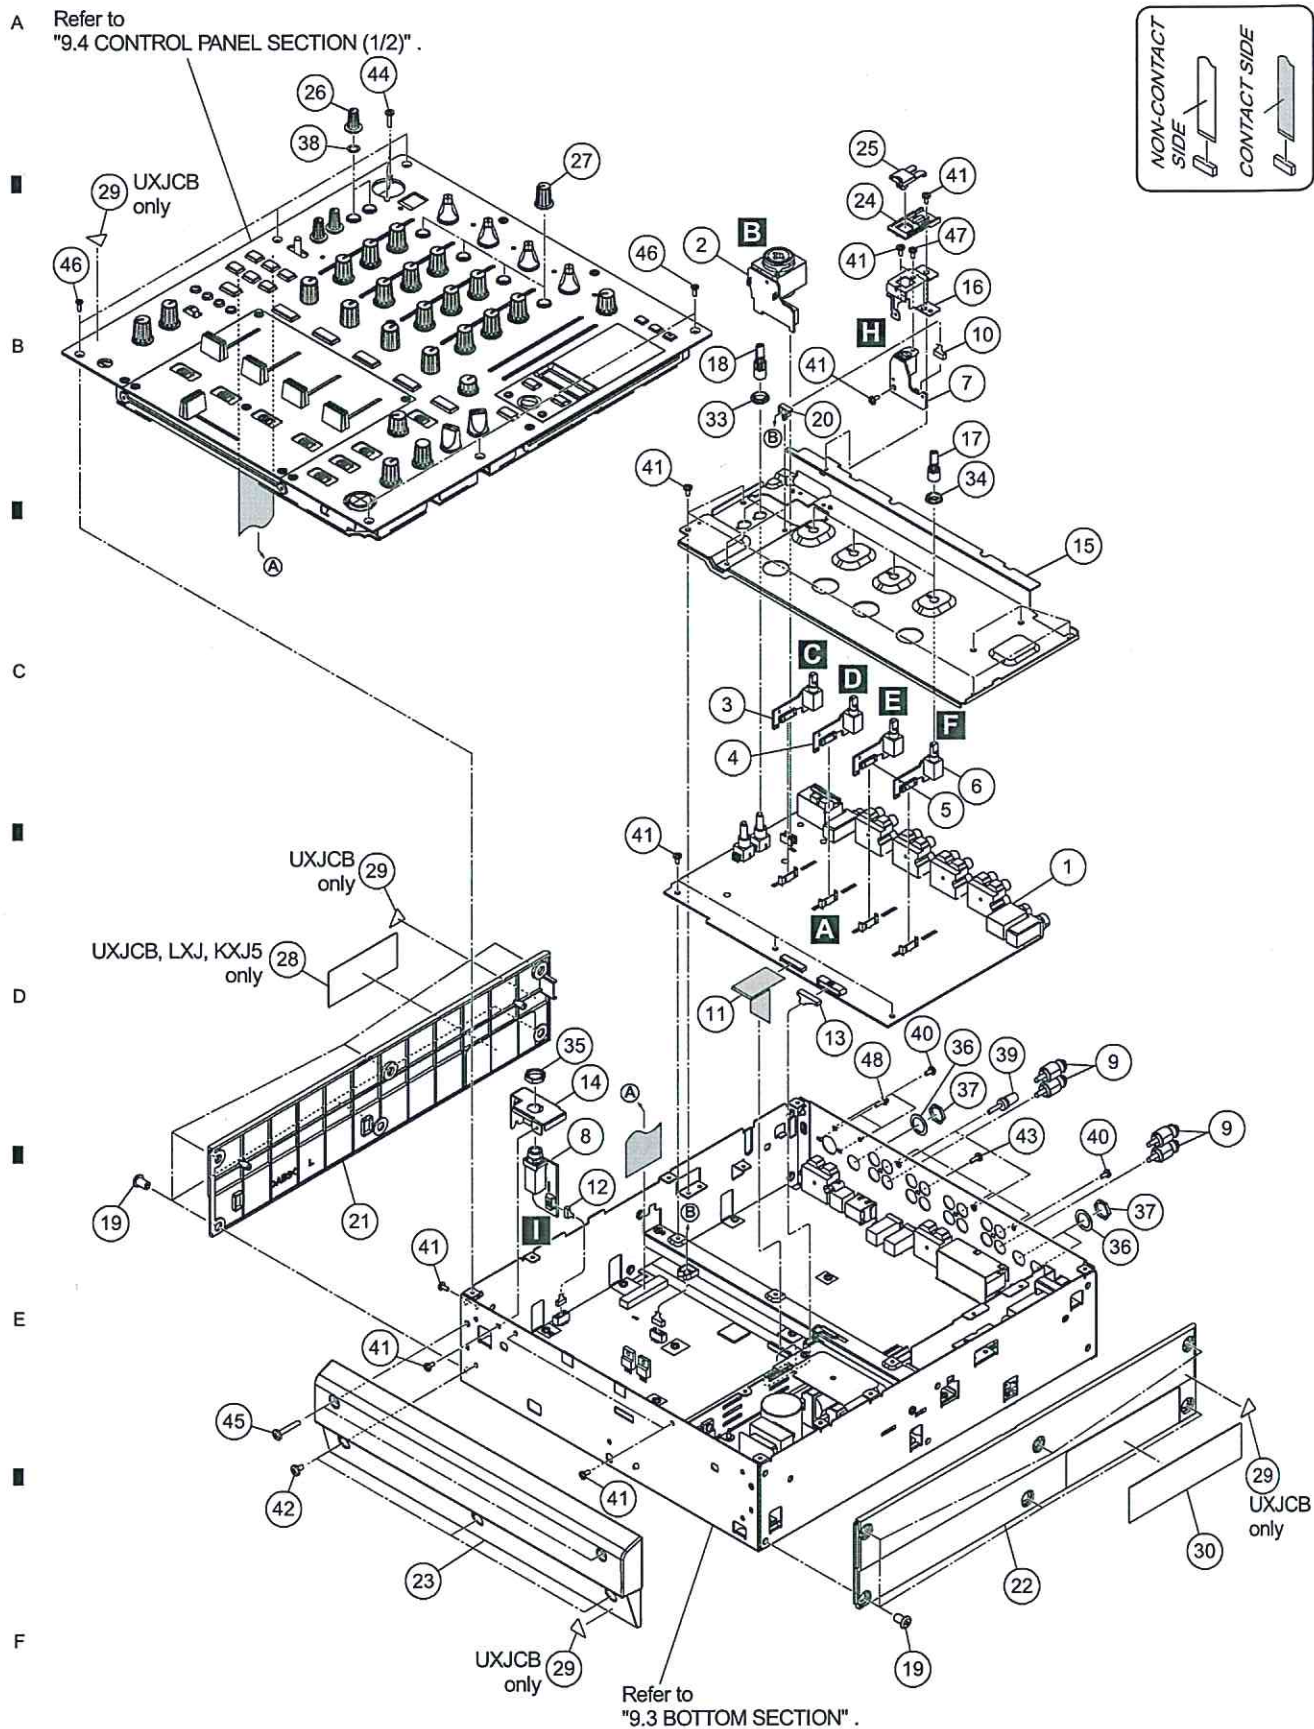

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	INPUT Assy	DWX3193
2	MIC1 Assy	DWX3207
3	TRM1 Assy	DWX3203
4	TRM2 Assy	DWX3204
5	TRM3 Assy	DWX3205
6	TRM4 Assy	DWX3206
7	USBI Assy	DWX3192
8	HPJK Assy	DWX3208
9	Short Pin Plug	AKM7008
10	USB Cable (5P)	DDA1041
11	40P FFC	DDD1550
12	Connector Assy	PF04PP-S12
13	Connector Assy	PF11PP-D07
14	HP Stay	DNF1820
15	TRIM Bracket	DNF1864
16	USB Bracket	DNF1868
17	Extension Shaft A	DNK5365
18	Extension Shaft B	DNK5366
19	Rivet (Plastic)	AEC1877
20	Locking Mini Clamp	DEC2439
21	Side Panel L	DNK5363
22	Side Panel R	DNK5364
23	Front Panel	DNK5845
24	USB Panel	DNK5847
25	USB Cover B	DNK5868


Mark No.	Description	Part No.
26	Rotary SW Knob S (B)	DAA1178
27	Rotary SW Knob S (C)	DAA1204
NSP	28 Caution Label	See Contrast table (2)
NSP	29 Label	See Contrast table (2)
NSP	30 Name Label	See Contrast table (2)
31		
32		
33	Flange Nut M9	DBN1008
34	Flange Nut M7	DBN1011
35	Nut M12	DBN1018
36	Washer	DEC2920
37	Nut	NKX2FTC
38	Washer	WA62D095D025
39	Terminal Screw	AKE-031
40	Screw	BBZ30P060FTB
41	Screw	BBZ30P060FTC
42	Screw	BCZ40P060FTB
43	Screw	BPZ30P080FTB
44	Screw	BPZ30P120FTB
45	Screw	BSZ40P220FTB
46	Screw	CCZ30P080FTB
47	Screw (M3x5)	DBA1340
48	Screw	PMH30P100FTB

(2) CONTRAST TABLE

DJM-900NXS/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-900NXS /SYXJ8	DJM-900NXS /UXJCB	DJM-900NXS /LXJ	DJM-900NXS /KXJ5	DJM-900NXS /XJCN5
NSP	28	Caution Label	Not used	DRW2429	DRW2430	DRW2432	Not used
NSP	29	Label	Not used	DRW1975	Not used	Not used	Not used
NSP	30	Name Label	DRW2463	DRW2472	DRW2473	DRW2476	DRW2475

9.3 BOTTOM SECTION

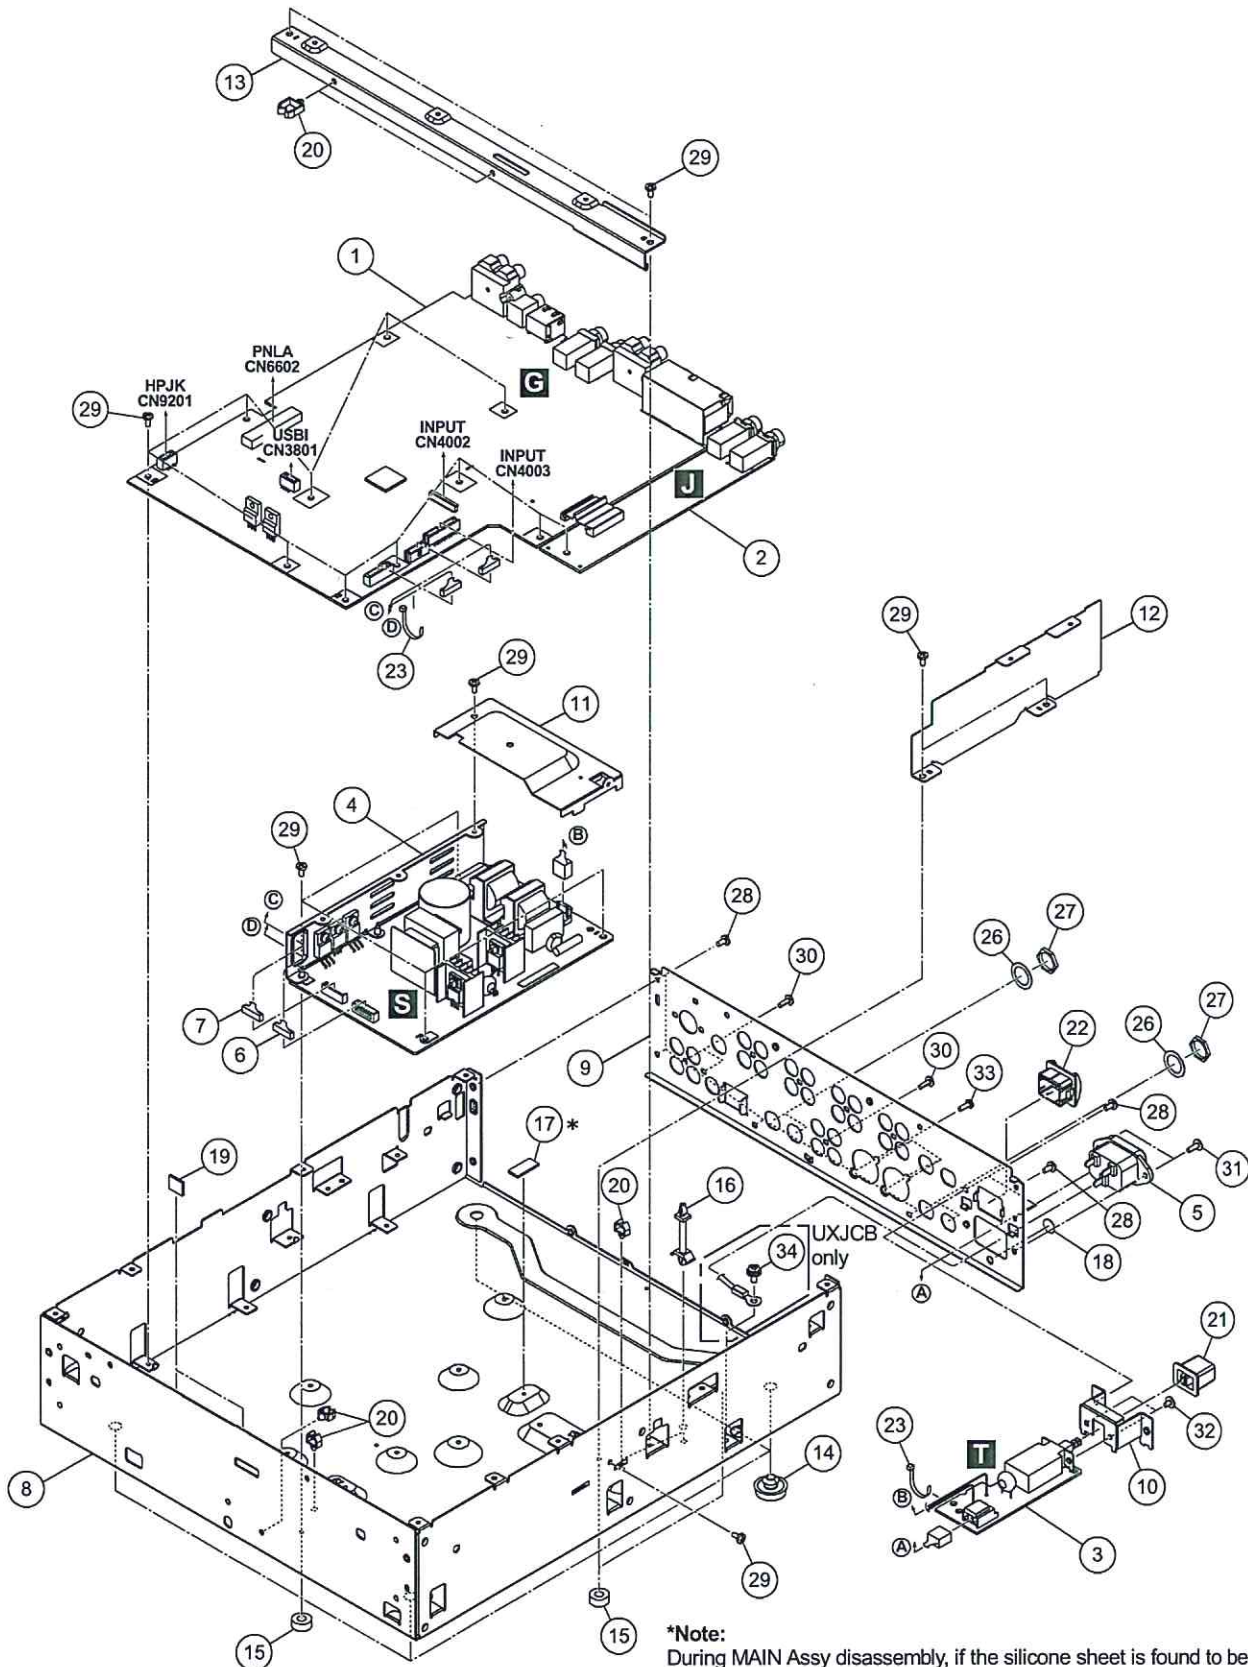

BOTTOM SECTION PARTS LIST

Mark No.	Description	Part No.
	1 MAIN Assy	DWX3190
	2 SEND Assy	DWX3195
	3 ACSW Assy	DWR1490
△	4 POWER SUPPLY Assy	DWR1492
△	5 AC Inlet Assy	See Contrast table (2)
	6 Connector Assy	DKP3901
	7 Connector Assy	PF06EP-S22
NSP	8 Chassis	DNA1410
	9 Rear Panel	See Contrast table (2)
	10 Bracket PSW	DNF1759
	11 Power Shield	DNF1815
	12 AC Shield	DNF1816
	13 Center Stay	DNF1867
	14 Foot (Rubber)	REC-434
NSP	15 Spacer	AEB7092
	16 PCB Support	AEC7513
NSP	17 Silicon Rubber D5 L	DEB1456
	18 Blind Label	DEC2928
	19 Tape	DEC3053
	20 Holder	VEC1355
	21 Power Knob	DAC2306
	22 Power Knob Guard	DNK4534
	23 Binder	ZCA-SKB90BK
	24	
	25	
	26 Washer	DEC2920
	27 Nut	NKX2FTC
	28 Screw	BBZ30P060FTB
	29 Screw	BBZ30P060FTC
	30 Screw	BPZ30P080FTB
	31 Screw	IBZ30P080FTB
	32 Screw	IMZ30P040FTC
	33 Screw	PPZ30P080FTB
	34 Screw	See Contrast table (2)

(2) CONTRAST TABLE

DJM-900NXS/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-900NXS /SYXJ8	DJM-900NXS /UXJCB	DJM-900NXS /LXJ	DJM-900NXS /KXJ5	DJM-900NXS /XJCN5
△	5	AC Inlet Assy (2P)	DKP3762	Not used	DKP3762	DKP3762	DKP3762
△	5	AC Inlet Assy (3P)	Not used	DKP3927	Not used	Not used	Not used
	9	Rear Panel	DNC2020	DNC2037	DNC2038	DNC2041	DNC2040
	34	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used

9.4 CONTROL PANEL SECTION (1/2)

A


B

C

D

E

F

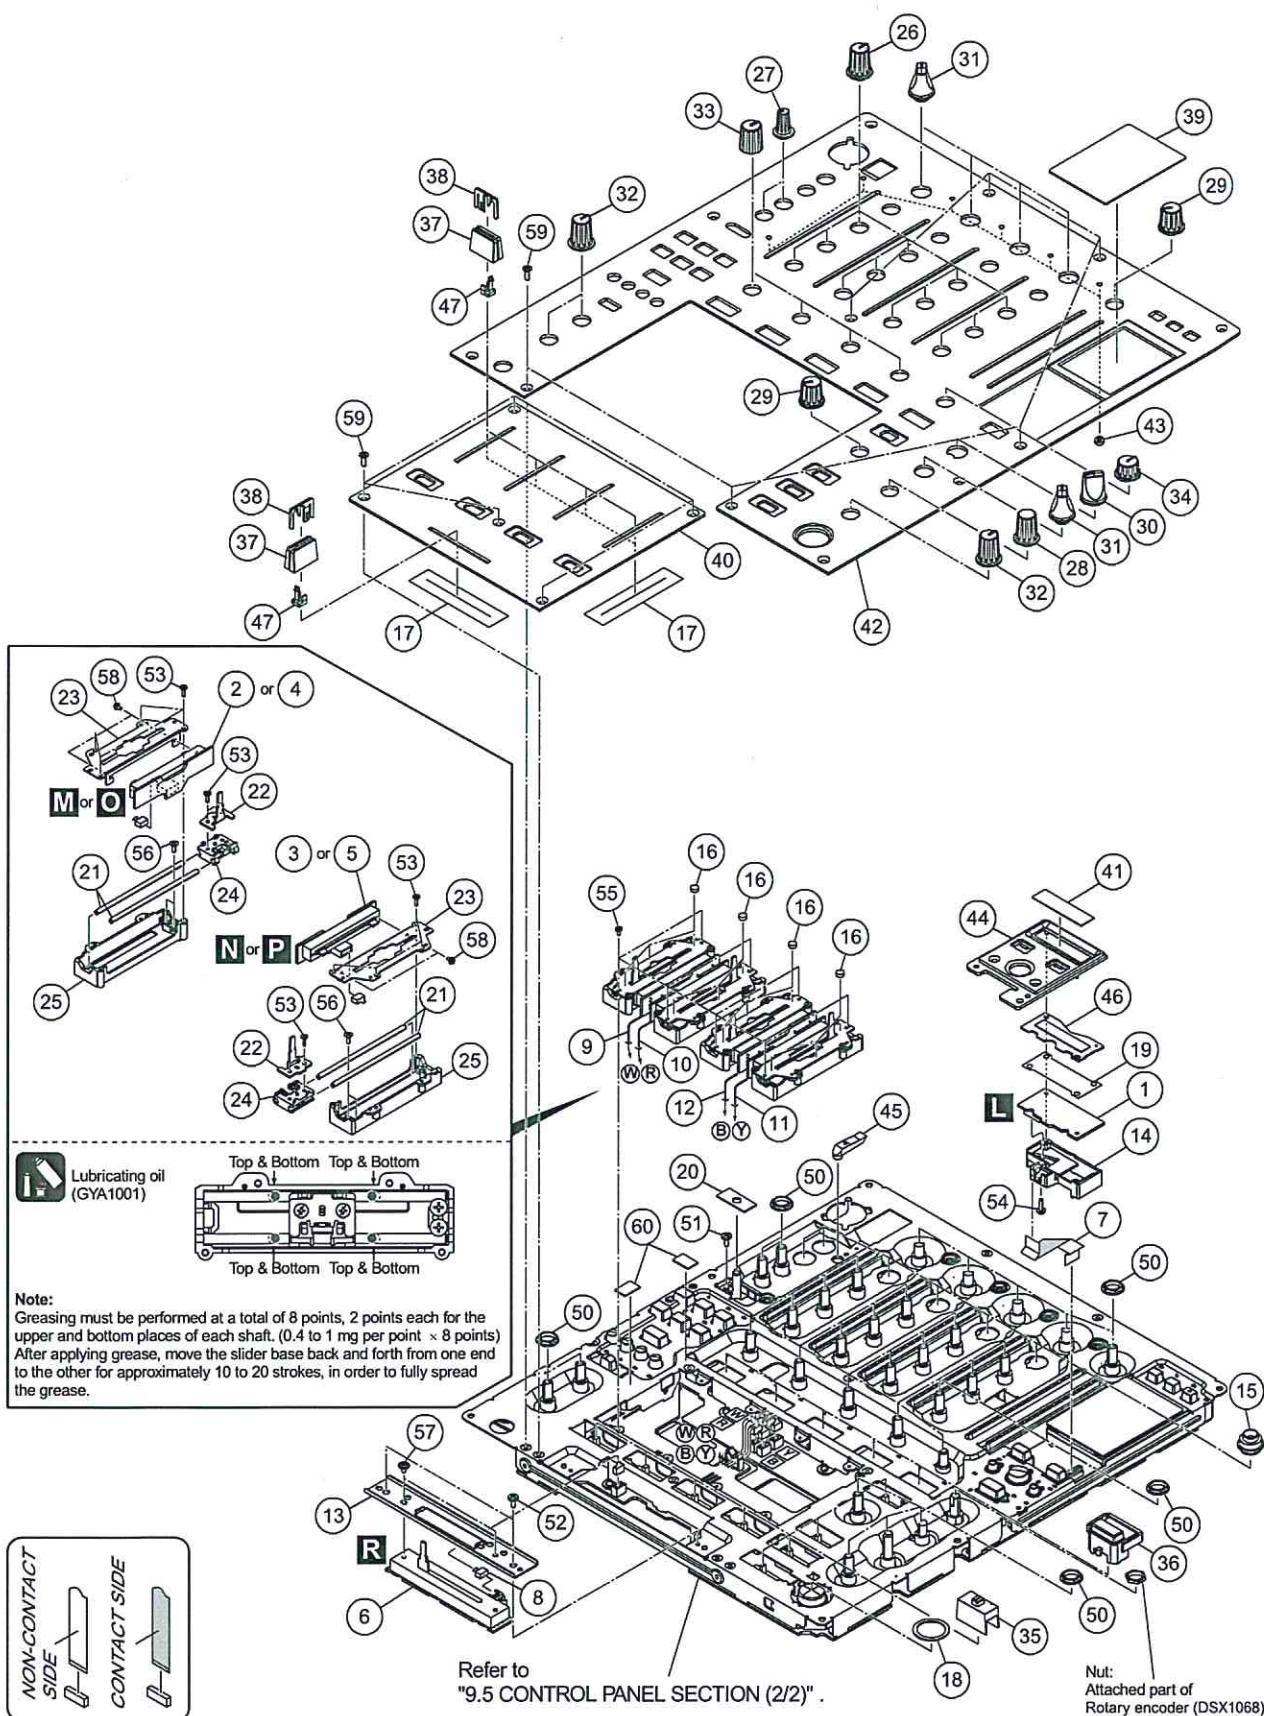


5 6 7 8

CONTROL PANEL SECTION (1/2) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	CDCB Assy	DWX3191	46	Lens (CDC)	DNK5871	
2	FAD1 Assy	DWX3198	47	Slider Knob Stopper	DNK5888	A
3	FAD2 Assy	DWX3199	48			
4	FAD3 Assy	DWX3200	49			
5	FAD4 Assy	DWX3201	50	Flange Nut M9	DBN1008	
6	FADC Assy	DWX3202	51	Screw	AMZ26P040FTC	
7	FFC	DDD1582	52	Screw	BBZ30P060FTC	
8	Connector Assy	PF03PP-B07	53	Screw	BPZ20P060FTC	
9	Connector Assy	PF03PP-B12	54	Screw	BPZ26P080FTC	
10	Connector Assy	PF03PP2B07	55	Screw	BSZ20P040FTB	
11	Connector Assy	PF03PP4B12	56	Screw	CPZ26P080FTC	B
12	Connector Assy	PF03PP6B07	57	Screw	IMZ30P040FTC	
13	CRF Stay	DNF1870	58	Screw	PMH20P040FTC	
14	CDC Holder	DNK5842	59	Screw	CCZ30P080FTB	
15	Bush	DNK5974	60	Spacer TFTB	DEC3300	
16	SW Cushion HH48/2	DEC2538				
17	Fader Packing	DEC2903				
18	SW Packing (EF)	DEC2929				
19	CDC Tape	DEC3324				
20	SW Packing	DED1177				C
NSP 21	Guide Shaft (S)	DLA1918				
22	Lever Plate	DNH2954				
23	VR Stay	DNH2955				
24	Slider Base	DNK5851				
25	Shaft Holder	DNK5852				
26	Rotary SW Knob (B)	DAA1176				
27	Rotary SW Knob S (A)	DAA1177				
28	Rotary SW Knob (C)	DAA1180				
29	Rotary SW Knob (MA)	DAA1198				D
30	Select Knob	DAA1205				
31	FX Sel Knob	DAA1213				
32	Rotary Knob (BN)	DAA1220				
33	Rotary SW Knob (HM)	DAA1256				
34	Rotary Knob Low (BN)	DAA1265				
35	Slide SW Cap (W)	DAC2401				
36	Button (CUE)	DAC2503				
37	Slider Knob 1	DAC2684				
38	Slider Knob 2	DAC2685				E
39	FL Panel	DAH2829				
40	Fader Panel	DAH2830				
41	CDC Sheet	DEC3325				
42	Control Panel	DNB1186				
43	Lens	DNK4532				
44	CDC Panel	DNK5846				
45	Lens (USB)	DNK5848				F

9.5 CONTROL PANEL SECTION (2/2)

A • Bottom view

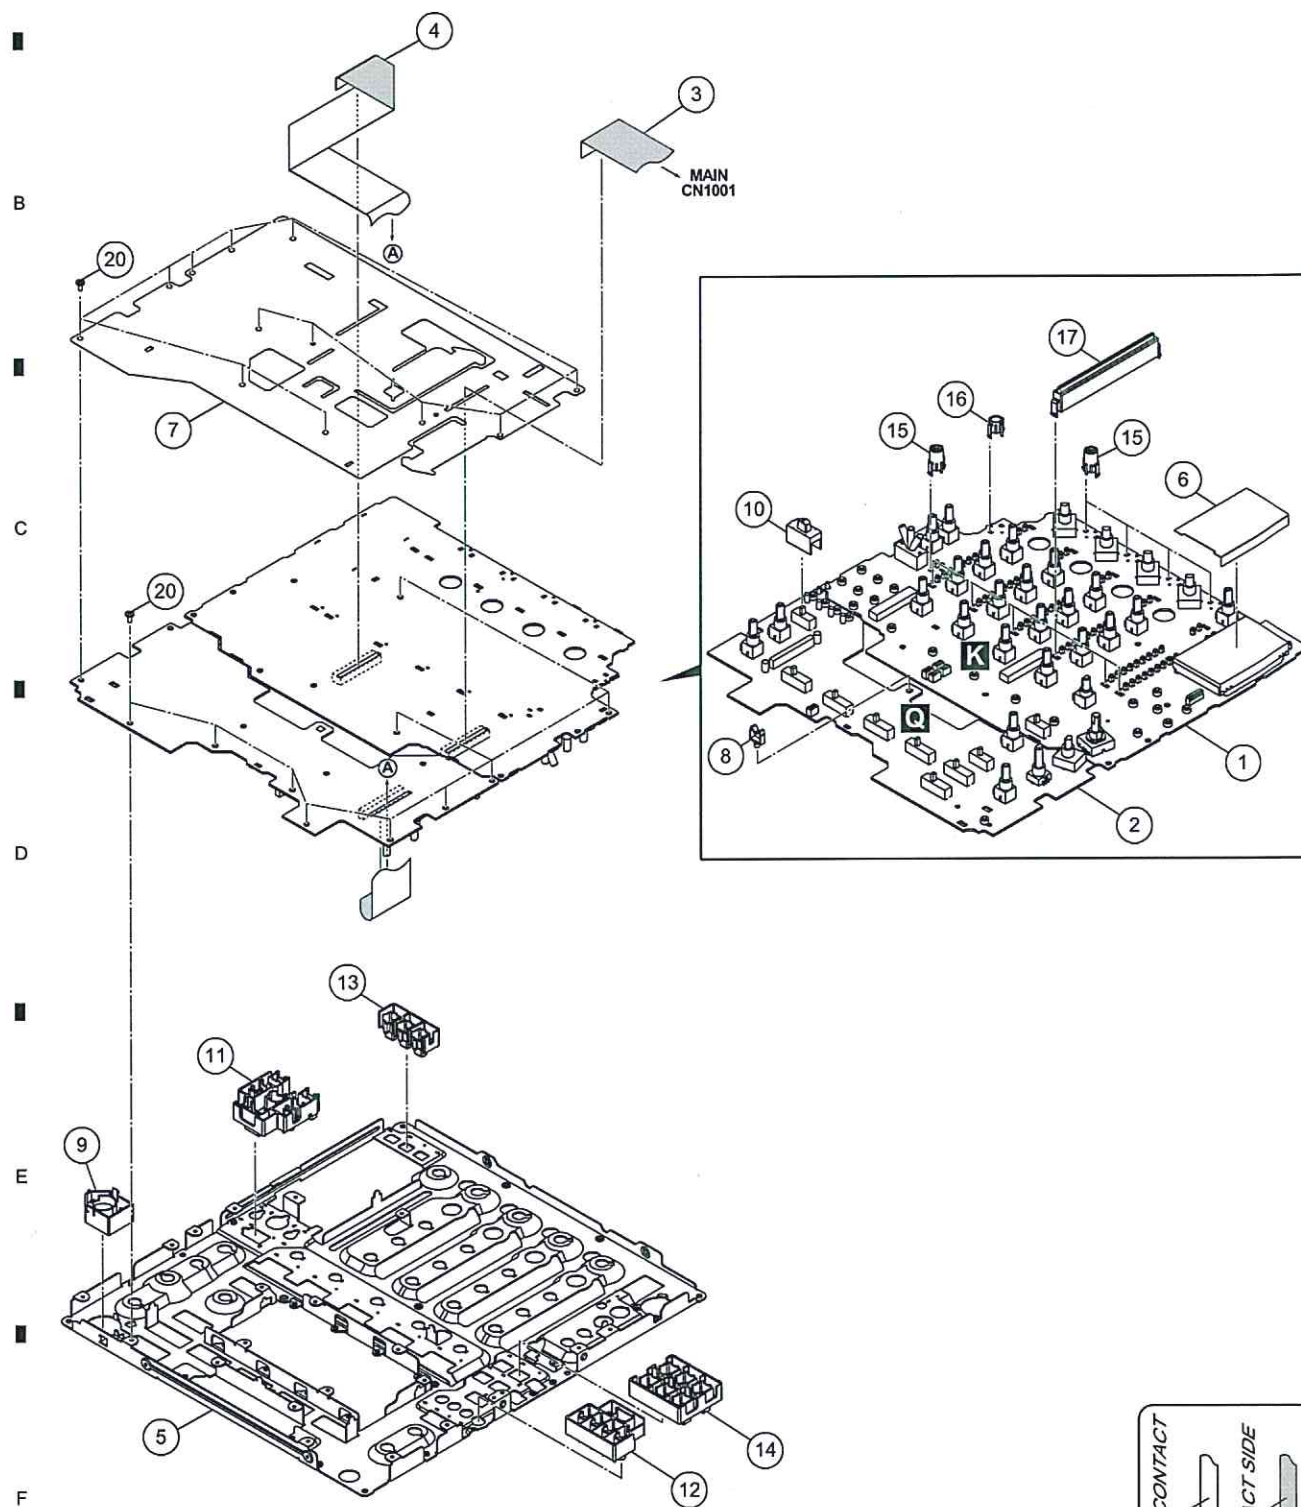

5 6 7 8

CONTROL PANEL SECTION (2/2) PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	PNLA Assy	DWX3196
2	PNLB Assy	DWX3197
3	31P FFC	DDD1551
4	31P FFC	DDD1553
5	Panel Stay	DND1265
6	Barrier FL	DEC3351
7	Barrier	DEC3382
8	Wire Saddle	XEC3100
9	Effect Knob	DAC2304
10	Slide SW Cap	DAC2400
11	Button (TAP)	DAC2653
12	Button (LINK)	DAC2654
13	Button (MIDI)	DAC2655
14	Button (CFX)	DAC2656
15	Lens Holder	DNK4533
16	Lens Holder (S)	DNK5849
17	Lebel Meter Assy	DXB1882
18		
19		
20	Screw	BBZ30P060FTC

A

B

C

D

E

F

9. EXPLODED VIEWS AND PARTS LIST

- NOTES:**
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)
 - Nos. indicate the pages and Nos. in the service manual for the base model.

9.1 PACKING SECTION

DJM-900NXS/SYXJ8, DJM-900SRT/LSYXJ8, DJM-900SRT/UXJCB and DJM-900SRT/XJCN5 are constructed the same except for the following:


Mark	No.	Symbol and Description	DJM-900NXS /SYXJ8	DJM-900SRT /LSYXJ8	DJM-900SRT /UXJCB	DJM-900SRT /XJCN5	Remarks
$\triangle$ NSP	P89-1	Power Cord	ADG7062	ADG7062	DDG1108	ADG7105	Installation Disc Serato DJ CONTROL CD
	P89-3	CD-ROM	DXX2694	DXX2757	DXX2757	DXX2757	
	P89-3	CD-ROM	Not used	DXX2734	DXX2734	DXX2734	
	P89-4	Operating Instructions (En/Fr/De/It/Nl/Es/Ru)	DRB1569	Not used	Not used	Not used	
NSP	P89-4	Operating Instructions (En/Fr/De/It/Nl/Es/Ru)	Not used	DRB1701	Not used	Not used	
	P89-5	Operating Instructions (En)	Not used	Not used	DRB1702	Not used	
	P89-8	Operating Instructions (Zhcn)	Not used	Not used	Not used	DRB1703	
	P89-9	Warranty Card	ARY7158	ARY7158	Not used	Not used	
NSP	P89-10	Flier	DRH1108	Not used	Not used	Not used	
	P89-13	Pad A	DHA1854	Not used	Not used	Not used	
	P89-13	Pad/F	Not used	DHA1896	DHA1896	DHA1896	
	P89-14	Pad B	DHA1855	Not used	Not used	Not used	
NSP	P89-14	Pad/R	Not used	DHA1897	DHA1897	DHA1897	
	P89-16	Packing Case	DHG3077	DHG3291	DHG3292	DHG3294	
		Leaflet/FPC	Not used	DRM1377	Not used	DRM1377	
		Leaflet/FIR	Not used	DRM1378	DRM1378	DRM1378	
NSP		Leaflet/QSG	Not used	DRM1380	DRM1380	DRM1380	
NSP		Leaflet/ERT	Not used	DRM1384	DRM1384	DRM1384	
NSP		Packing Board	Not used	DHB1002	DHB1002	DHB1002	
		Poly Bag	Not used	AHG7082	AHG7082	AHG7082	
NSP		Record Assy/DVS	Not used	DXX2733	DXX2733	DXX2733	Serato DJ CONTROL VINYL
NSP		Leaflet/SUF	DRH1204	Not used	Not used	Not used	
NSP		Leaflet/TEN	DRY1262	Not used	Not used	Not used	
NSP		Leaflet/TFR	DRY1263	Not used	Not used	Not used	
		Label	Not used	Not used	DRW2594	Not used	

9.2 EXTERIOR SECTION

DJM-900NXS/SYXJ8, DJM-900SRT/LSYXJ8, DJM-900SRT/UXJCB and DJM-900SRT/XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-900NXS /SYXJ8	DJM-900SRT /LSYXJ8	DJM-900SRT /UXJCB	DJM-900SRT /XJCN5	Remarks
A	P91-1	INPUT Assy	DWX3193	DWX3504	DWX3504	DWX3504	
	P91-3	TRM1 Assy	DWX3203	DWX3506	DWX3506	DWX3506	
	P91-4	TRM2 Assy	DWX3204	DWX3507	DWX3507	DWX3507	
	P91-5	TRM3 Assy	DWX3205	DWX3508	DWX3508	DWX3508	
	P91-6	TRM4 Assy	DWX3206	DWX3509	DWX3509	DWX3509	
	P91-9	Short Pin Plug	AKM7008	Not used	Not used	Not used	
B	P91-9	Plug/PIN	Not used	DKM1024	DKM1024	DKM1024	
	P91-17	Extension Shaft A	DNK5365	Not used	Not used	Not used	
	P91-23	Front Panel	DNK5845	Not used	Not used	Not used	
	P91-23	Panel/FR	Not used	DNK6260	DNK6260	DNK6260	
	P91-26	Rotary SW Knob S (B)	DAA1178	Not used	Not used	Not used	
	P91-26	KNOB/RSW	Not used	DAA1308	DAA1308	DAA1308	
C	P91-27	Rotary SW Knob S (C)	DAA1204	Not used	Not used	Not used	
	P91-27	Knob/CH	Not used	DAA1321	DAA1321	DAA1321	
	P91-29	Label	Not used	Not used	DRW1975	Not used	
	NSP	P91-30	DRW2463	DAL1270	DAL1263	DAL1265	
	NSP	Caution Label (L)	Not used	DRW2430	Not used	Not used	
	NSP	Name Label/Ru	DRW2486	Not used	Not used	Not used	
D	NSP	Label/FCC	Not used	Not used	DRW2595	Not used	

EXTERIOR SECTION

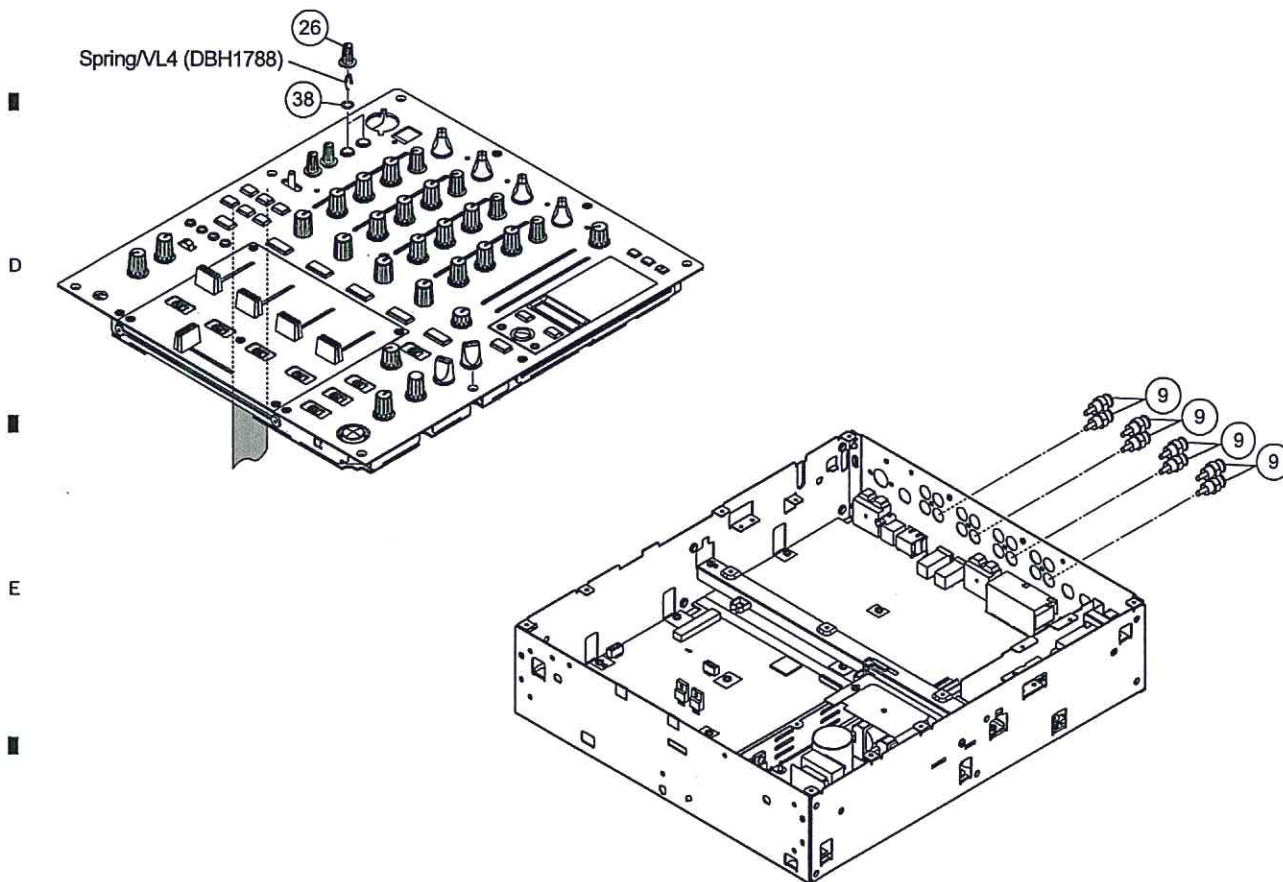

9.3 BOTTOM SECTION

DJM-900NXS/SYXJ8, DJM-900SRT/LSYXJ8, DJM-900SRT/UXJCB and DJM-900SRT/XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-900NXS /SYXJ8	DJM-900SRT /LSYXJ8	DJM-900SRT /UXJCB	DJM-900SRT /XJCN5	Remarks
		BOTTOM SECTION					
	P93-1	MAIN Assy	DWX3190	DWX3502	DWX3502	DWX3502	
	P93-2	SEND Assy	DWX3195	DWX3505	DWX3505	DWX3505	
⚠	P93-5	AC Inlet Assy (2P)	DKP3762	DKP3762	Not used	DKP3762	
⚠	P93-5	AC Inlet Assy (3P)	Not used	Not used	DKP3927	Not used	
	P93-9	Rear Panel	DNC2020	DNC2107	DNC2107	DNC2108	
	P93-34	Screw	Not used	Not used	PMH40P080FTC	Not used	

BOTTOM SECTION

*Caution : About No.17 Silicon Rubber D5 L DEB1456

During MAIN Assy disassembly, if the silicone sheet is found to be deformed, replace it with a new one.


Looking at the bottom panel of the Looking at the bottom panel of the chassis from the outside, check that the hole is covered by a silicon sheet and that the MAIN Assy is not seen through the hole.

9.4 CONTROL PANEL SECTION (1/2)

DJM-900NXS/SYXJ8, DJM-900SRT/LSYXJ8, DJM-900SRT/UXJCB and DJM-900SRT/XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-900NXS /SYXJ8	DJM-900SRT /LSYXJ8	DJM-900SRT /UXJCB	DJM-900SRT /XJCN5	Remarks
A	CONTROL PANEL SECTION (1/2)						
	P95-6	FADC Assy	DWX3202	Not used	Not used	Not used	
	P95-6	CRFD ASSY	Not used	DWX3258	DWX3258	DWX3258	
	P95-13	CRF Stay	DNF1870	Not used	Not used	Not used	
	P95-13	Stay/CRF	Not used	DNF1927	DNF1927	DNF1927	
B	P95-15	Bush	DNK5974	Not used	Not used	Not used	
	P93-26	Rotary SW Knob (B)	DAA1176	Not used	Not used	Not used	
	P93-26	Knob/RSW	Not used	DAA1305	DAA1305	DAA1305	
	P93-27	Rotary SW Knob S (A)	DAA1177	Not used	Not used	Not used	
	P93-27	Knob/RSW	Not used	DAA1307	DAA1307	DAA1307	
C	P95-33	Rotary SW Knob (HM)	DAA1256	Not used	Not used	Not used	
	P95-33	Knob/CL	Not used	DAA1320	DAA1320	DAA1320	
	P95-36	Button (CUE)	DAC2503	Not used	Not used	Not used	
	P95-36	Button/CUE	Not used	DAC2882	DAC2882	DAC2882	
	P95-37	Slider Knob 1	DAC2684	Not used	Not used	Not used	
D	P95-37	Knob/SLD	Not used	DAC2935	DAC2935	DAC2935	
	P95-40	Fader Panel	DAH2830	Not used	Not used	Not used	
	P95-40	Panel/FD	Not used	DAH2971	DAH2971	DAH2971	
	P95-42	Control Panel	DNB1186	DNB1233	DNB1233	DNB1233	
	P95-44	CDC Panel	DNK5846	Not used	Not used	Not used	
E	P95-44	Panel/CDC	Not used	DNK6258	DNK6258	DNK6258	
	P95-57	Screw	IMZ30P040FTC	BPZ30P080FTB	BPZ30P080FTB	BPZ30P080FTB	
F	P95-61	Cross Fader Assy	Not used	DXA2257	DXA2257	DXA2257	

CONTROL PANEL SECTION (1/2)

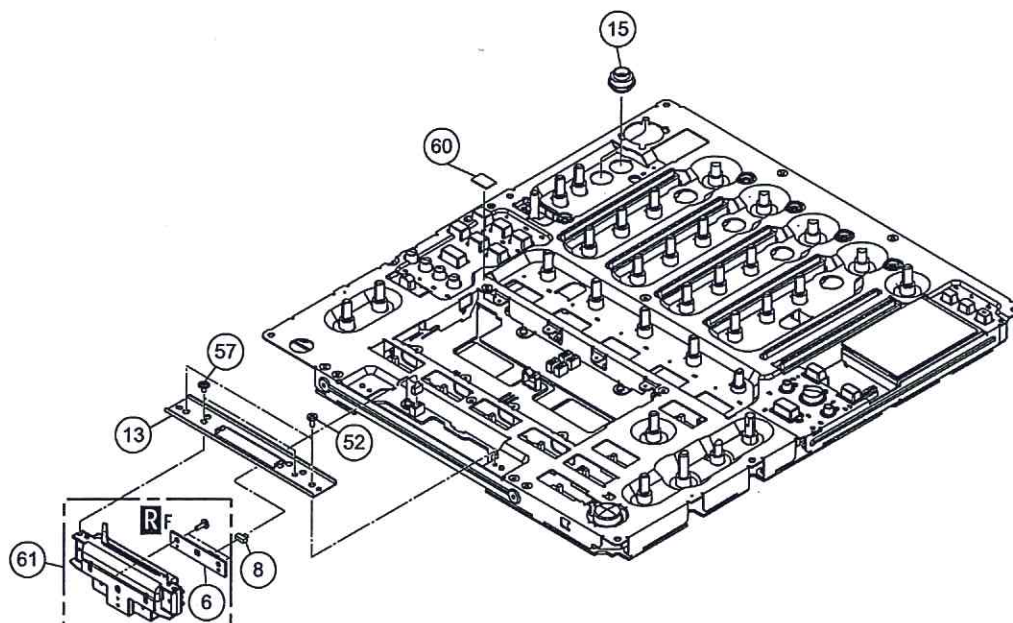

9.5 CONTROL PANEL SECTION (2/2)

DJM-900NXS/SYXJ8, DJM-900SRT/LSYXJ8, DJM-900SRT/UXJCB and DJM-900SRT/XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-900NXS /SYXJ8	DJM-900SRT /LSYXJ8	DJM-900SRT /UXJCB	DJM-900SRT /XJCN5	Remarks
		CONTROL PANEL SECTION (2/2)					
	P97-1	PNLA ASSY	DWX3196	DWX3503	DWX3503	DWX3503	
	P97-2	PNLB Assy	DWX3197	DWX3510	DWX3510	DWX3510	
	P97-7	Barrier	DEC3382	DEC3512	DEC3512	DEC3512	
	P97-11	Button (TAP)	DAC2653	Not used	Not used	Not used	
	P97-11	Button/TAP	Not used	DAC2931	DAC2931	DAC2931	
	P97-12	Button (LINK)	DAC2654	Not used	Not used	Not used	
	P97-12	Button/FDS	Not used	DAC2932	DAC2932	DAC2932	