


9.2 EXTERIOR SECTION

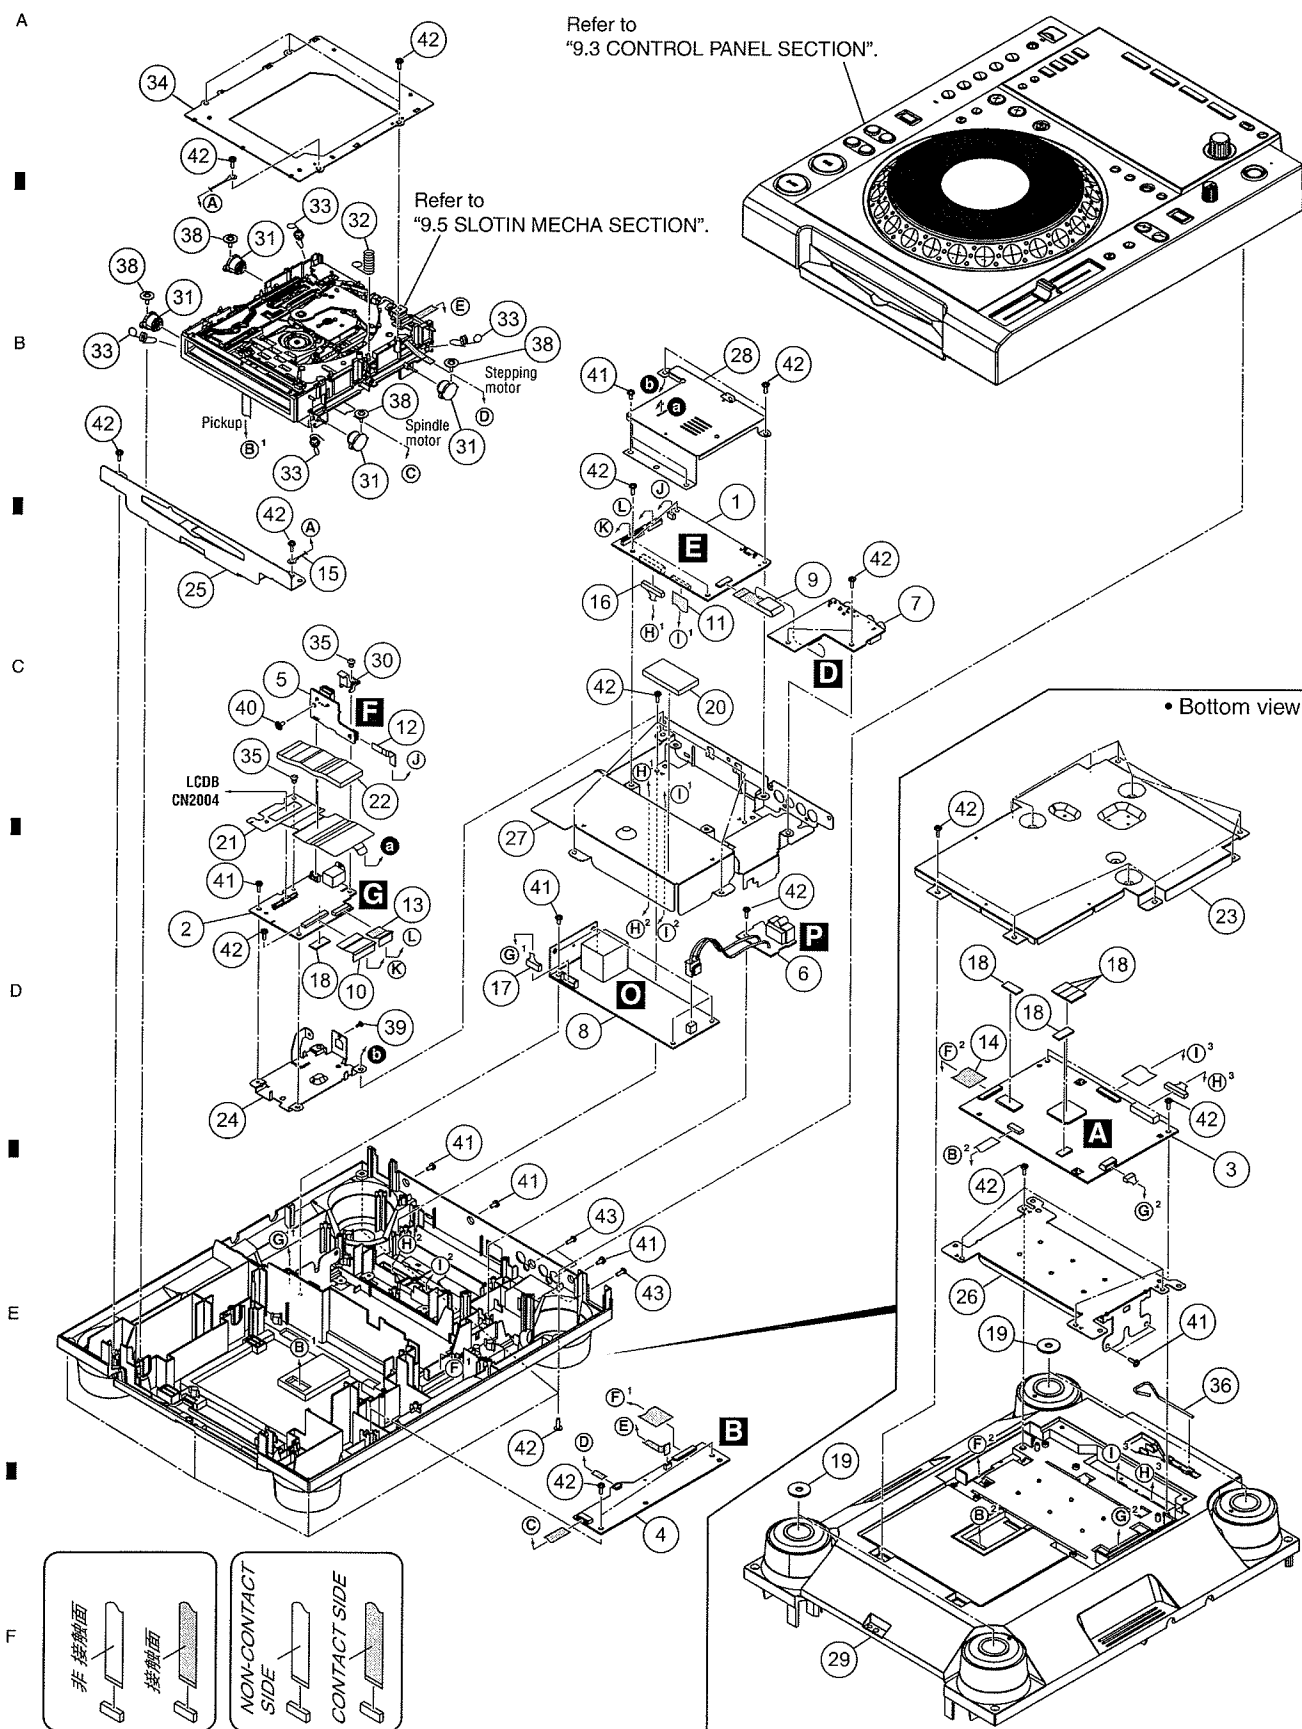


EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.	
	1	MAIN Assy	DWX3500	
	2	DDCB Assy	DWX3517	A
	3	SRVB Assy	DWX3519	
	4	JINT Assy	DWX3520	
	5	USBB Assy	DWX3518	
	6	ACIN Assy	DWX3529	■
	7	JACB Assy	DWX3532	
⚠	8	POWER SUPPLY Assy	DWR1463	
	9	13P FFC	DDD1484	
	10	FFC/50P	DDD1644	
	11	FFC/40P	DDD1646	B
	12	FFC/5P	DDD1648	
	13	FFC/15P	DDD1649	
	14	FFC/21P	DDD1655	
	15	Cord With Plug	DE007VE0	■
	16	Crimp Connector/12P	DKP3946	
	17	Crimp Connector/6P	DKP3947	
	18	Silicon Rubber D5 L	DEB1456	
	19	Cushion	DEC3177	
	20	Cushion/FFC	DEC3430	C
	21	Sheet/FFC	DEC3510	
	22	Cushion/FFC	DEC3531	
	23	Plate	DNH3118	
	24	Stay/USB	DNH3119	
	25	Plate/FR	DNH3120	■
	26	Stay/PSA	DNH3121	
	27	Stay/PCB	DNH3122	
	28	Shield Case/MIN	DNH3124	
⚠	29	Chassis	DNK6263	D
	30	Holder/PCB	DNK6284	
	31	Damper	CNV7618	
	32	Earth Spring	DBH1398	
	33	Float Spring (G5)	DBH1494	■
	34	Mecha Plate	DNH2642	
	35	Rivet	RBM-003	
	36	Disc Force Eject Pin	DEX1023	
	37			
	38	DM Screw (FTC)	DBA1260	E
	39	Screw (M3*5)	DBA1340	
	40	Screw	ABZ30P060FTC	
	41	Screw	BBZ30P060FTB	
	42	Screw	BPZ30P080FNI	■
	43	Screw	PPZ30P080FTB	

F

9.3 CONTROL PANEL SECTION

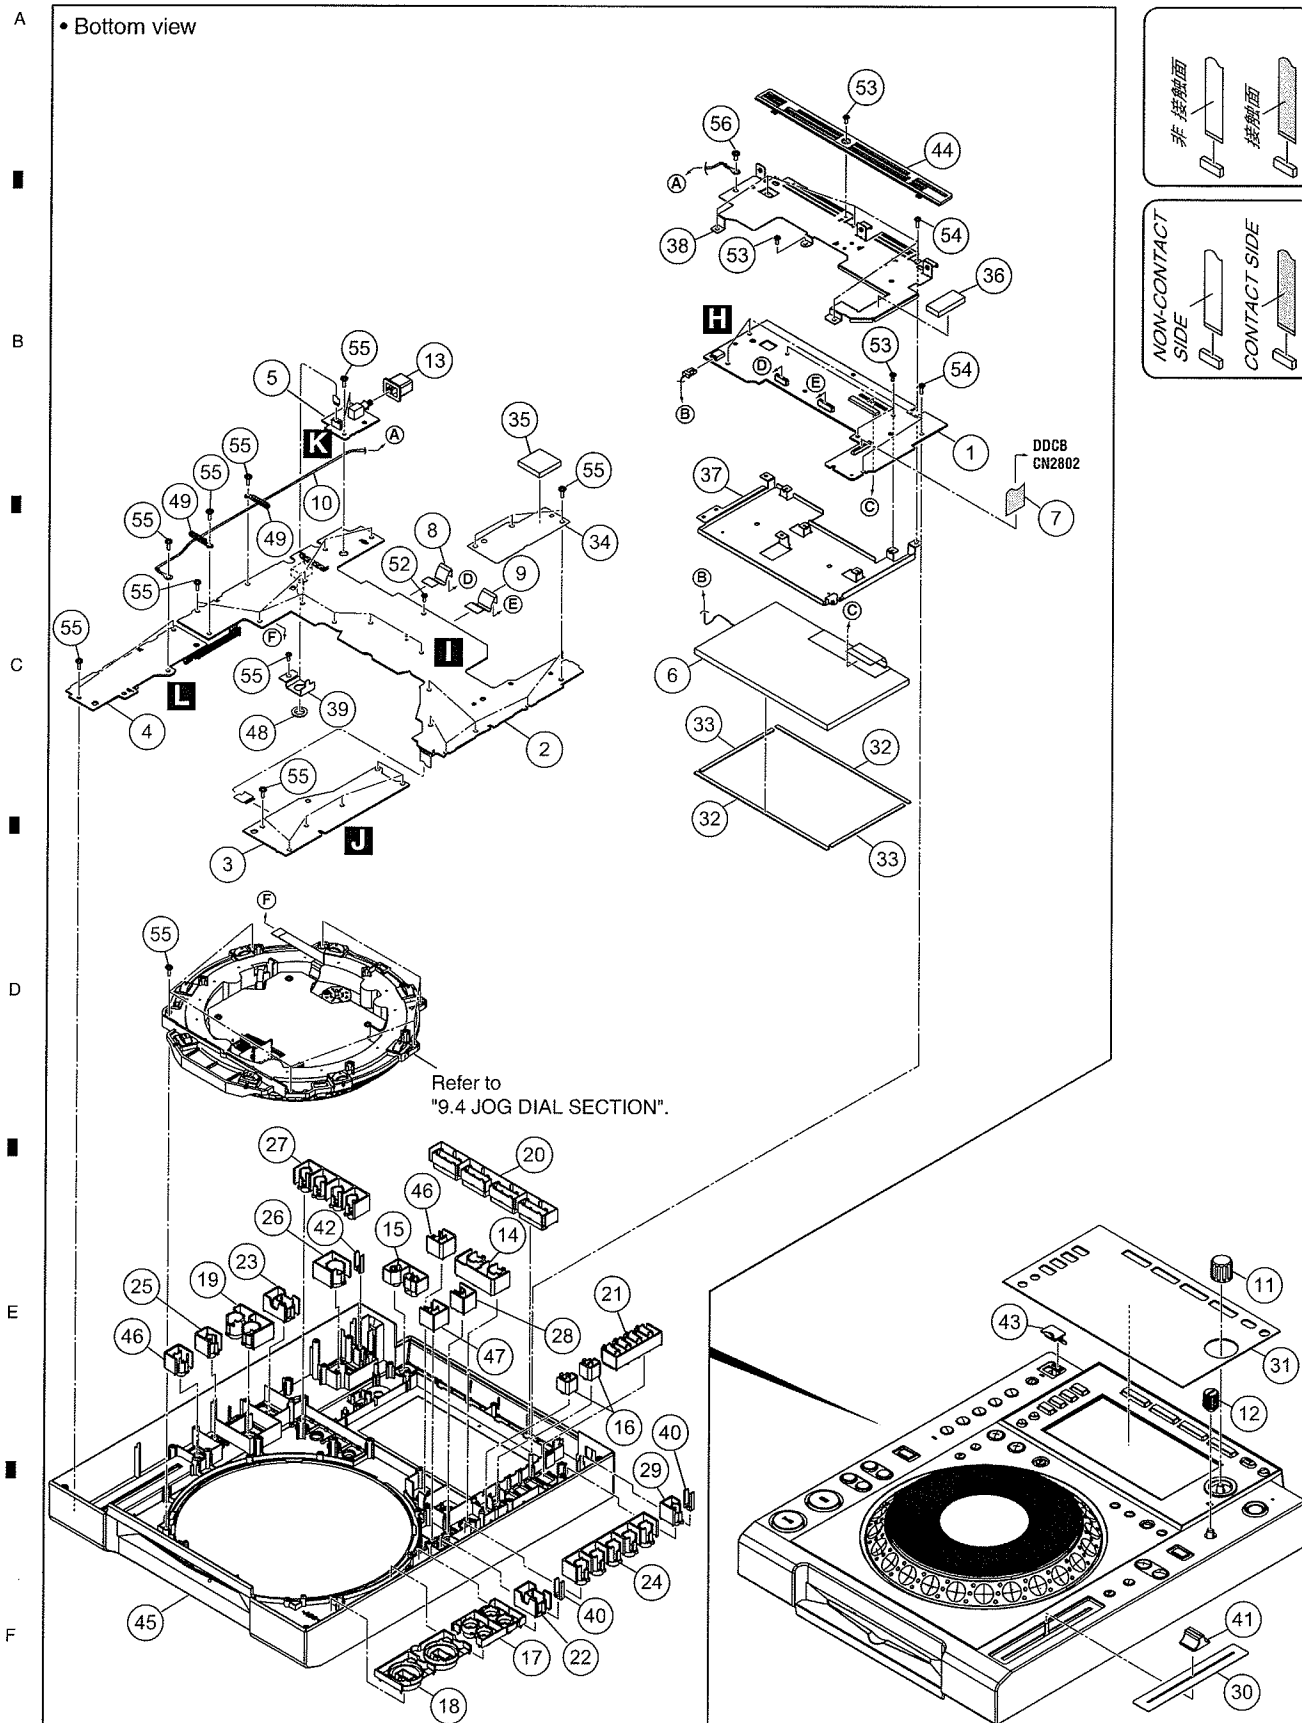

CONTROL PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	LCDB Assy	DWX3516	46	Button Assy/RLP	DXB2142	A
2	PNLB Assy	DWX3522	47	Button Assy/SLP	DXB2143	
3	KSWB Assy	DWX3523	48	Flange Nut M9	DBN1008	
4	SLDB Assy	DWX3526	49	Cord Clamper	RNH-184	
5	PSWB Assy	DWX3527	50			
6	TFT LCD	CWX4352	51			B
7	FFC/50P	DDD1645	52	Screw	ABZ30P060FTC	
8	FFC/12P	DDD1650	53	Screw	BBZ26P060FTB	
9	FFC/15P	DDD1651	54	Screw	BPZ26P080FTC	
10	Earth Lead Wire	DDX1286	55	Screw	BPZ30P080FNI	
11	Dial Knob	DAA1259	56	Screw	BSZ30P060FTC	C
12	Knob	DAA1303				
13	Power Knob	DAC2306				
14	Button (LOOP)	DAC2470				
15	Button (MENU)	DAC2480				
16	Button (TIME)	DAC2483				D
17	Set Button (SEARCH)	DAC2495				
18	Play Knob	DAC2596				
19	Button/BSY	DAC2934				
20	Button/MOD	DAC2936				
21	Button/DEV	DAC2937				E
22	Button/REV	DAC2938				
23	Button/VNL	DAC2939				
24	Button/BD	DAC2940				
25	Button/TMP	DAC2942				
26	Button/EJT	DAC2943				F
27	Button/CAL	DAC2945				
28	Button/4BL	DAC2946				
29	Button/USB	DAC2947				
30	Slide Sheet 1C	DAH2404				
31	Panel/DIS	DAH2978				
32	Packing/FR	DEC3493				
33	Packing/LR	DEC3494				
34	Cover/PNL	DEC3509				
35	Cushion/PNL	DEC3535				
36	Cushion/LCD	DEC3538				
37	Stay/LCD	DND1277				
38	Bracket/LCD	DND1278				
39	Stay/VR	DNF1928				
40	Device Lens	DNK5318				
41	Knob/SLD	DNK5981				
42	Lens/EUP	DNK6040				
43	Cover/USB	DNK6041				
44	Cover/R	DNK6264				
45	Control Panel	DNK6266				

