


9. EXPLODED VIEWS AND PARTS LIST

- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

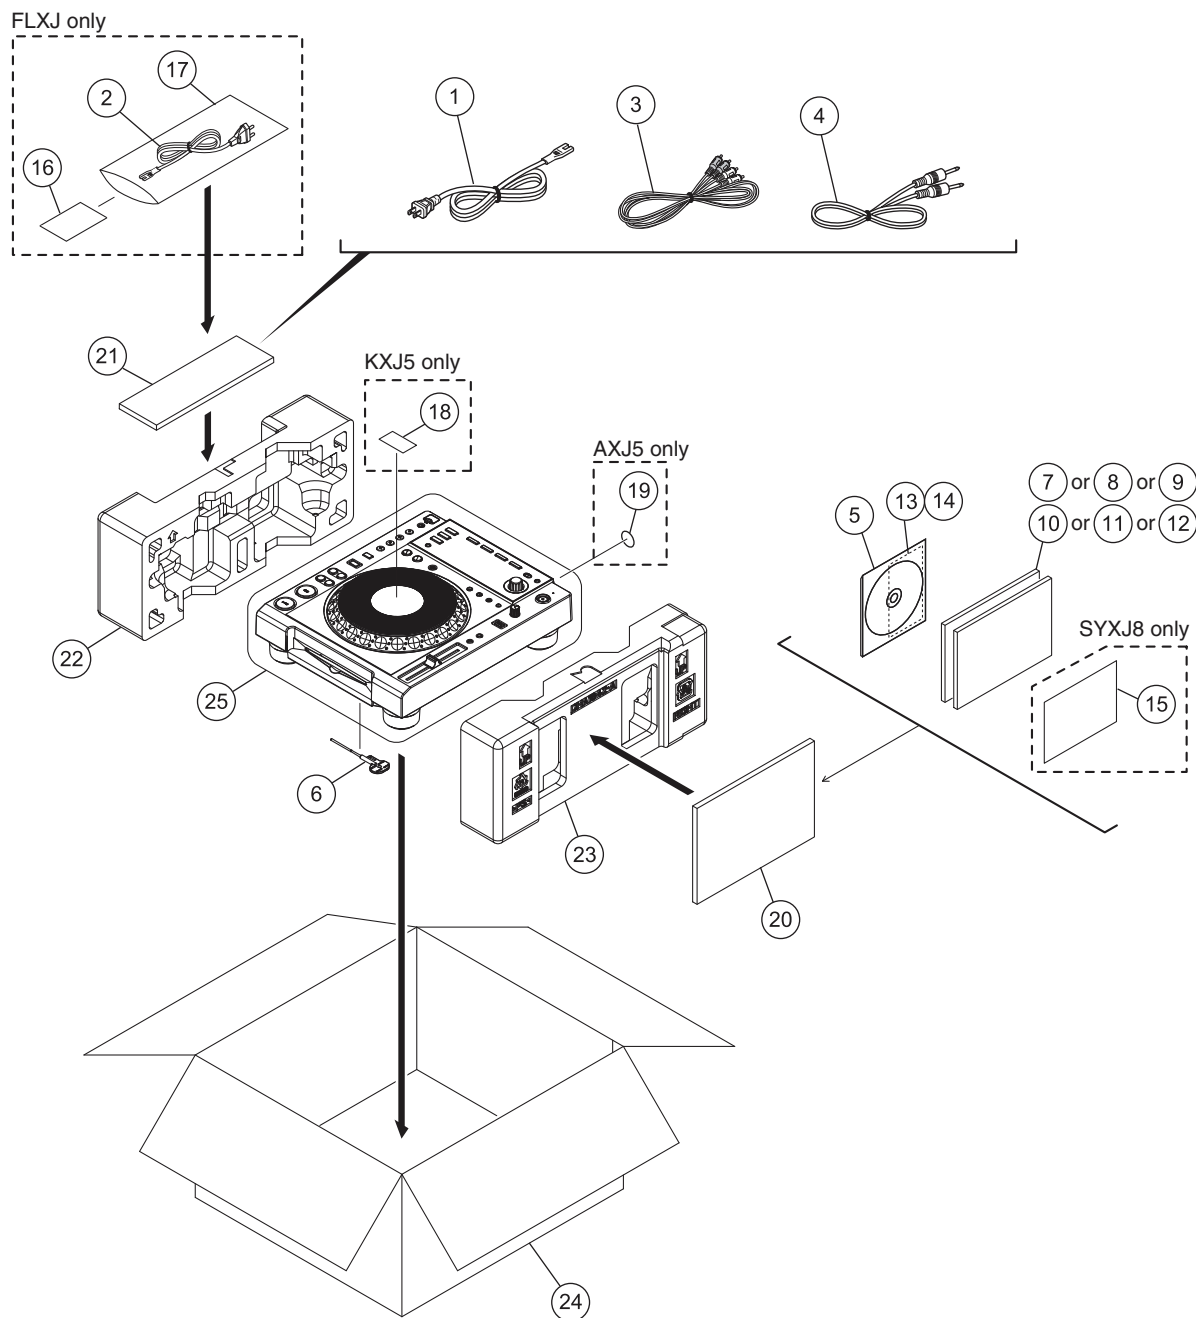

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
⚠	1 Power Cord	See Contrast table (2)	NSP 15	Warranty Card	See Contrast table (2)	
⚠	2 Power Cord	See Contrast table (2)	16	Caution Card SB	See Contrast table (2)	A
	3 Audio cable	XDE3045	17	Vinyl Bag	See Contrast table (2)	
	4 Control cord	XDE3063	18	Recycle Label (M)	See Contrast table (2)	
	5 CD-ROM (rekordbox license key attached)	DXX2654	NSP 19	CCC S & E Label	See Contrast table (2)	
	6 Disc force eject pin (mounted on bottom of product)	DEX1008	NSP 20	Polyethylene Bag	AHG7117	
	7 Operating Instructions	See Contrast table (2)	21	Vinyl Bag	Z21-013	
	8 Operating Instructions	See Contrast table (2)	22	Pad L	DHA1841	
	9 Operating Instructions	See Contrast table (2)	23	Pad R	DHA1842	
	10 Operating Instructions	See Contrast table (2)	24	Packing Case	See Contrast table (2)	
	11 Operating Instructions	See Contrast table (2)	25	Sheet	RHX1006	B
	12 Operating Instructions	See Contrast table (2)				
NSP 13	License Key Label	DRW2402				
NSP 14	License Key Label Assy	DXA2190				

(2) CONTRAST TABLE

CDJ-850/SYXJ8, CUXJ, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-850 /SYXJ8	CDJ-850 /CUXJ	CDJ-850 /FLXJ	CDJ-850 /KXJ5	CDJ-850 /AXJ5
⚠	1	Power Cord	ADG1154	ADG7022	ADG1154	XDG3054	ADG7079
⚠	2	Power Cord	Not used	Not used	ADG7097	Not used	Not used
	7	Operating Instructions (En, Fr, De)	DRB1527	Not used	Not used	Not used	Not used
	8	Operating Instructions (It, NI, Es, Ru)	DRB1535	Not used	Not used	Not used	Not used
	9	Operating Instructions (En, Fr)	Not used	DRB1526	Not used	Not used	Not used
	10	Operating Instructions (En, Es, Zhtw)	Not used	Not used	DRB1528	Not used	Not used
	11	Operating Instructions (Ko)	Not used	Not used	Not used	DRB1530	Not used
	12	Operating Instructions (Zhcn, En)	Not used	Not used	Not used	Not used	DRB1529
NSP	15	Warranty Card	ARY7107	Not used	Not used	Not used	Not used
	16	Caution Card SB	Not used	Not used	ARM7064	Not used	Not used
	17	Vinyl Bag	Not used	Not used	Z21-013	Not used	Not used
	18	Recycle Label (M)	Not used	Not used	Not used	DRW2307	Not used
NSP	19	CCC S & E Label	Not used	Not used	Not used	Not used	DRW2310
	24	Packing Case	DHG2918	DHG2919	DHG2920	DHG2923	DHG2922

9.2 EXTERIOR SECTION

A

B


C

D

E

F

Refer to
"9.3 CONTROL PANEL SECTION".

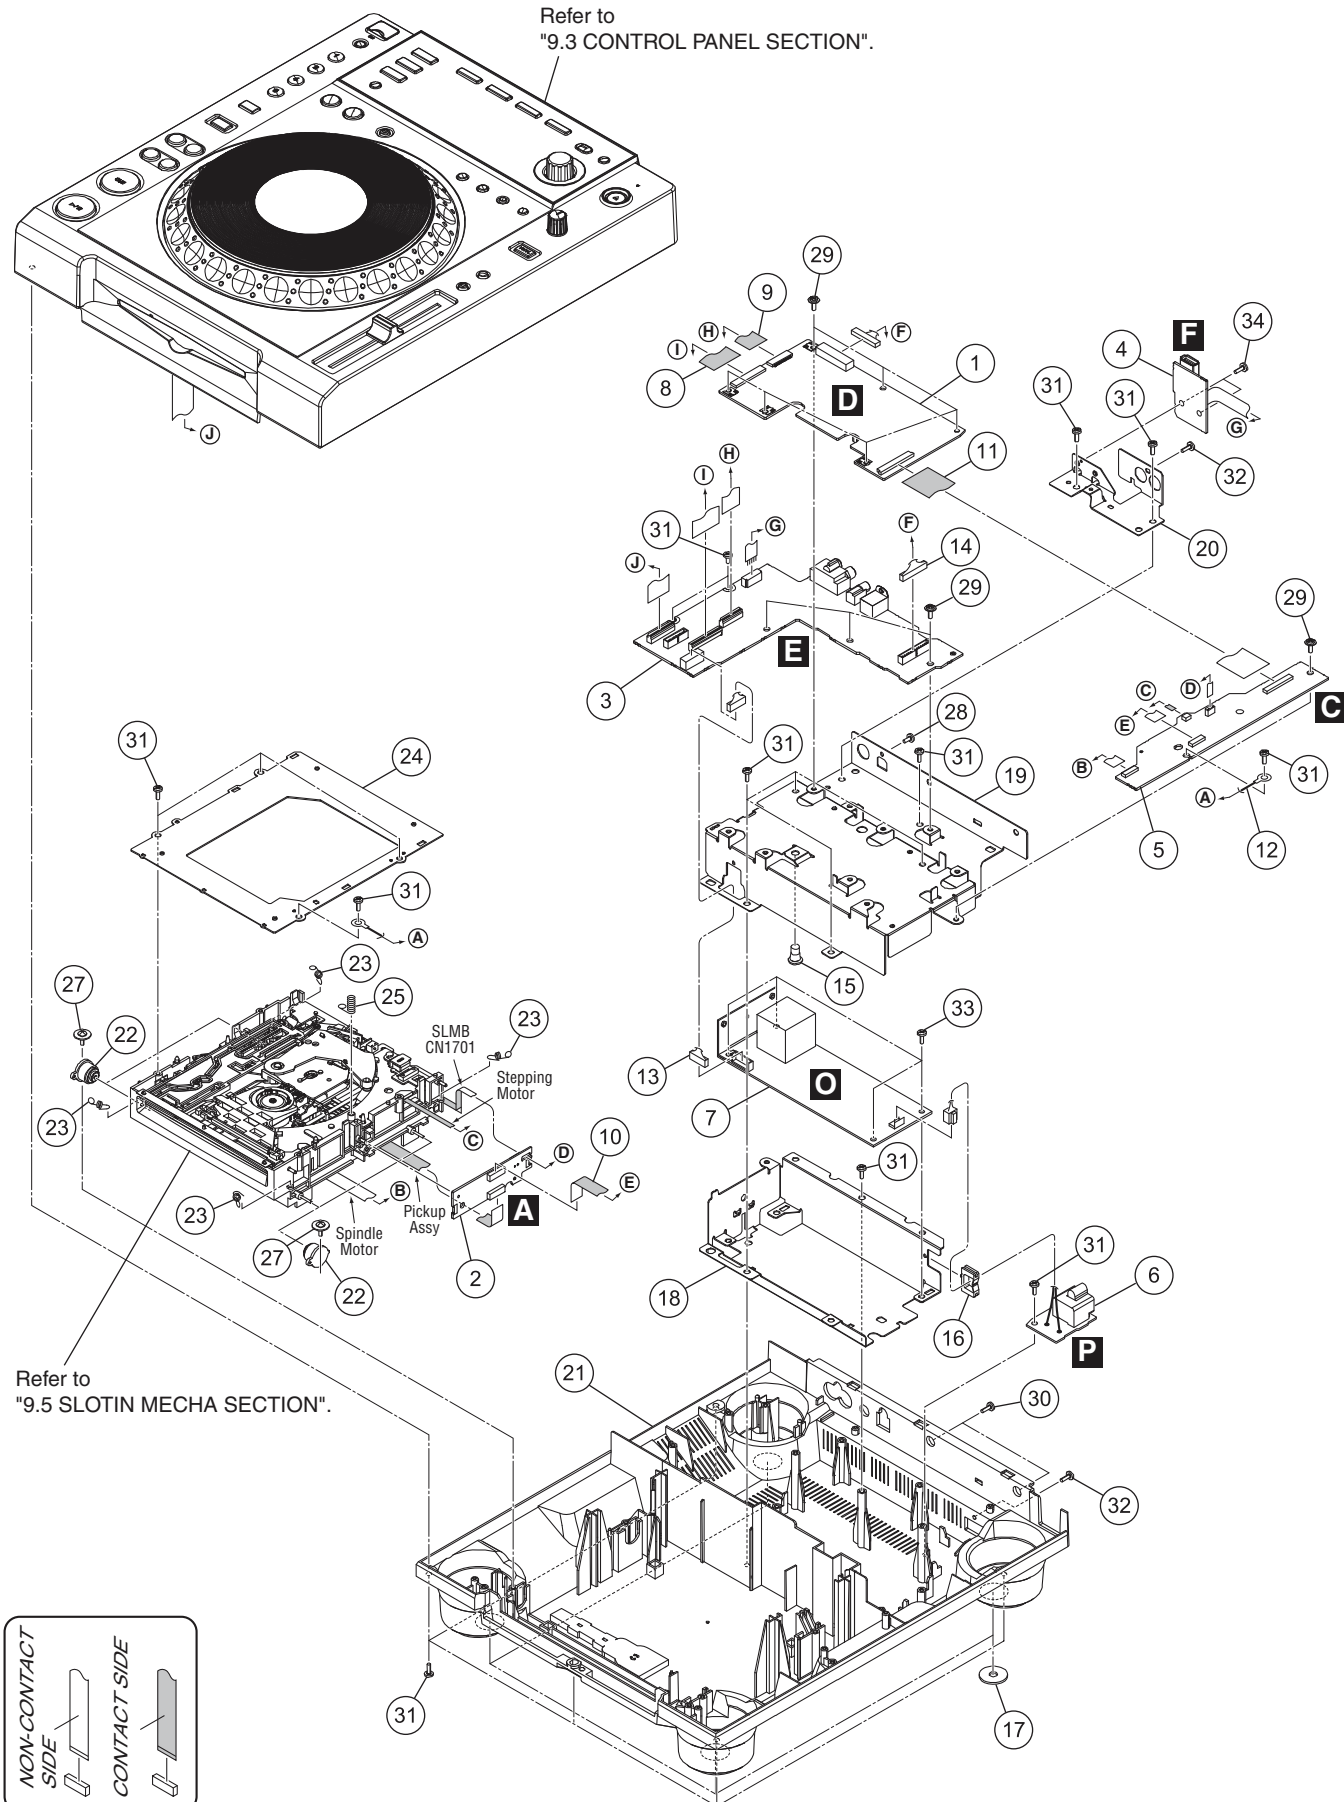


	5		6		7		8	
(1) EXTERIOR SECTION SECTION PARTS LIST								
	Mark No.	Description	Part No.		Mark No.	Description	Part No.	
	1	MAIN Assy	DWX3174		⚠ 21	Chassis	See Contrast table (2)	
	2	CNCT Assy	DWX3151		22	Damper	CNV6011	A
	3	CMPX Assy	DWX3153		23	Float Spring G5	DBH1494	
	4	USBA Assy	DWX3156		24	Mecha Plate	DNH2642	
	5	JINT Assy	DWX3157		25	Earth Spring	DBH1398	
	6	ACIN Assy	See Contrast table (2)		26	•••••		
	⚠ 7	POWER SUPPLY Assy	DWR1463		27	DM Screw (FTC)	DBA1260	
	8	27P FFC	DDD1523		28	Screw (M3 x 5)	DBA1340	
	9	17P FFC	DDD1524		29	Screw	ABZ30P060FTC	
	10	24P FFC	DDD1535		30	Screw	BBZ30P060FTB	
					31	Screw	BPZ30P080FNI	B
	11	50P FFC	DDD1536					
NSP	12	Cord With Plug	DE010VE0		32	Screw	BPZ30P080FTB	
	13	Connector Assy 6P	DKP3869		33	Screw	BPZ30P100FTC	
	14	Connector Assy	PF13PP-S07		34	Screw	BSZ30P060FTC	
	15	Card Spacer	AEC7133					
	16	Edge Saddle	AEC7582					
	17	Cushion	DEC3177					
	18	Power Supply Stay	DNH2936					
	19	Main PCB Stay	DNH2937					
NSP	20	USB Stay	DNH2938					C

(2) CONTRAST TABLE

CDJ-850/SYXJ8, CUXJ, FLXJ, KXJ5 and AXJ5 are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-850 /SYXJ8	CDJ-850 /CUXJ	CDJ-850 /FLXJ	CDJ-850 /KXJ5	CDJ-850 /AXJ5
⚠	6 21	ACIN Assy Chassis	DWX3158 DNK5785	DWX3173 DNK5819	DWX3158 DNK5820	DWX3158 DNK5823	DWX3158 DNK5822

9.3 CONTROL PANEL SECTION

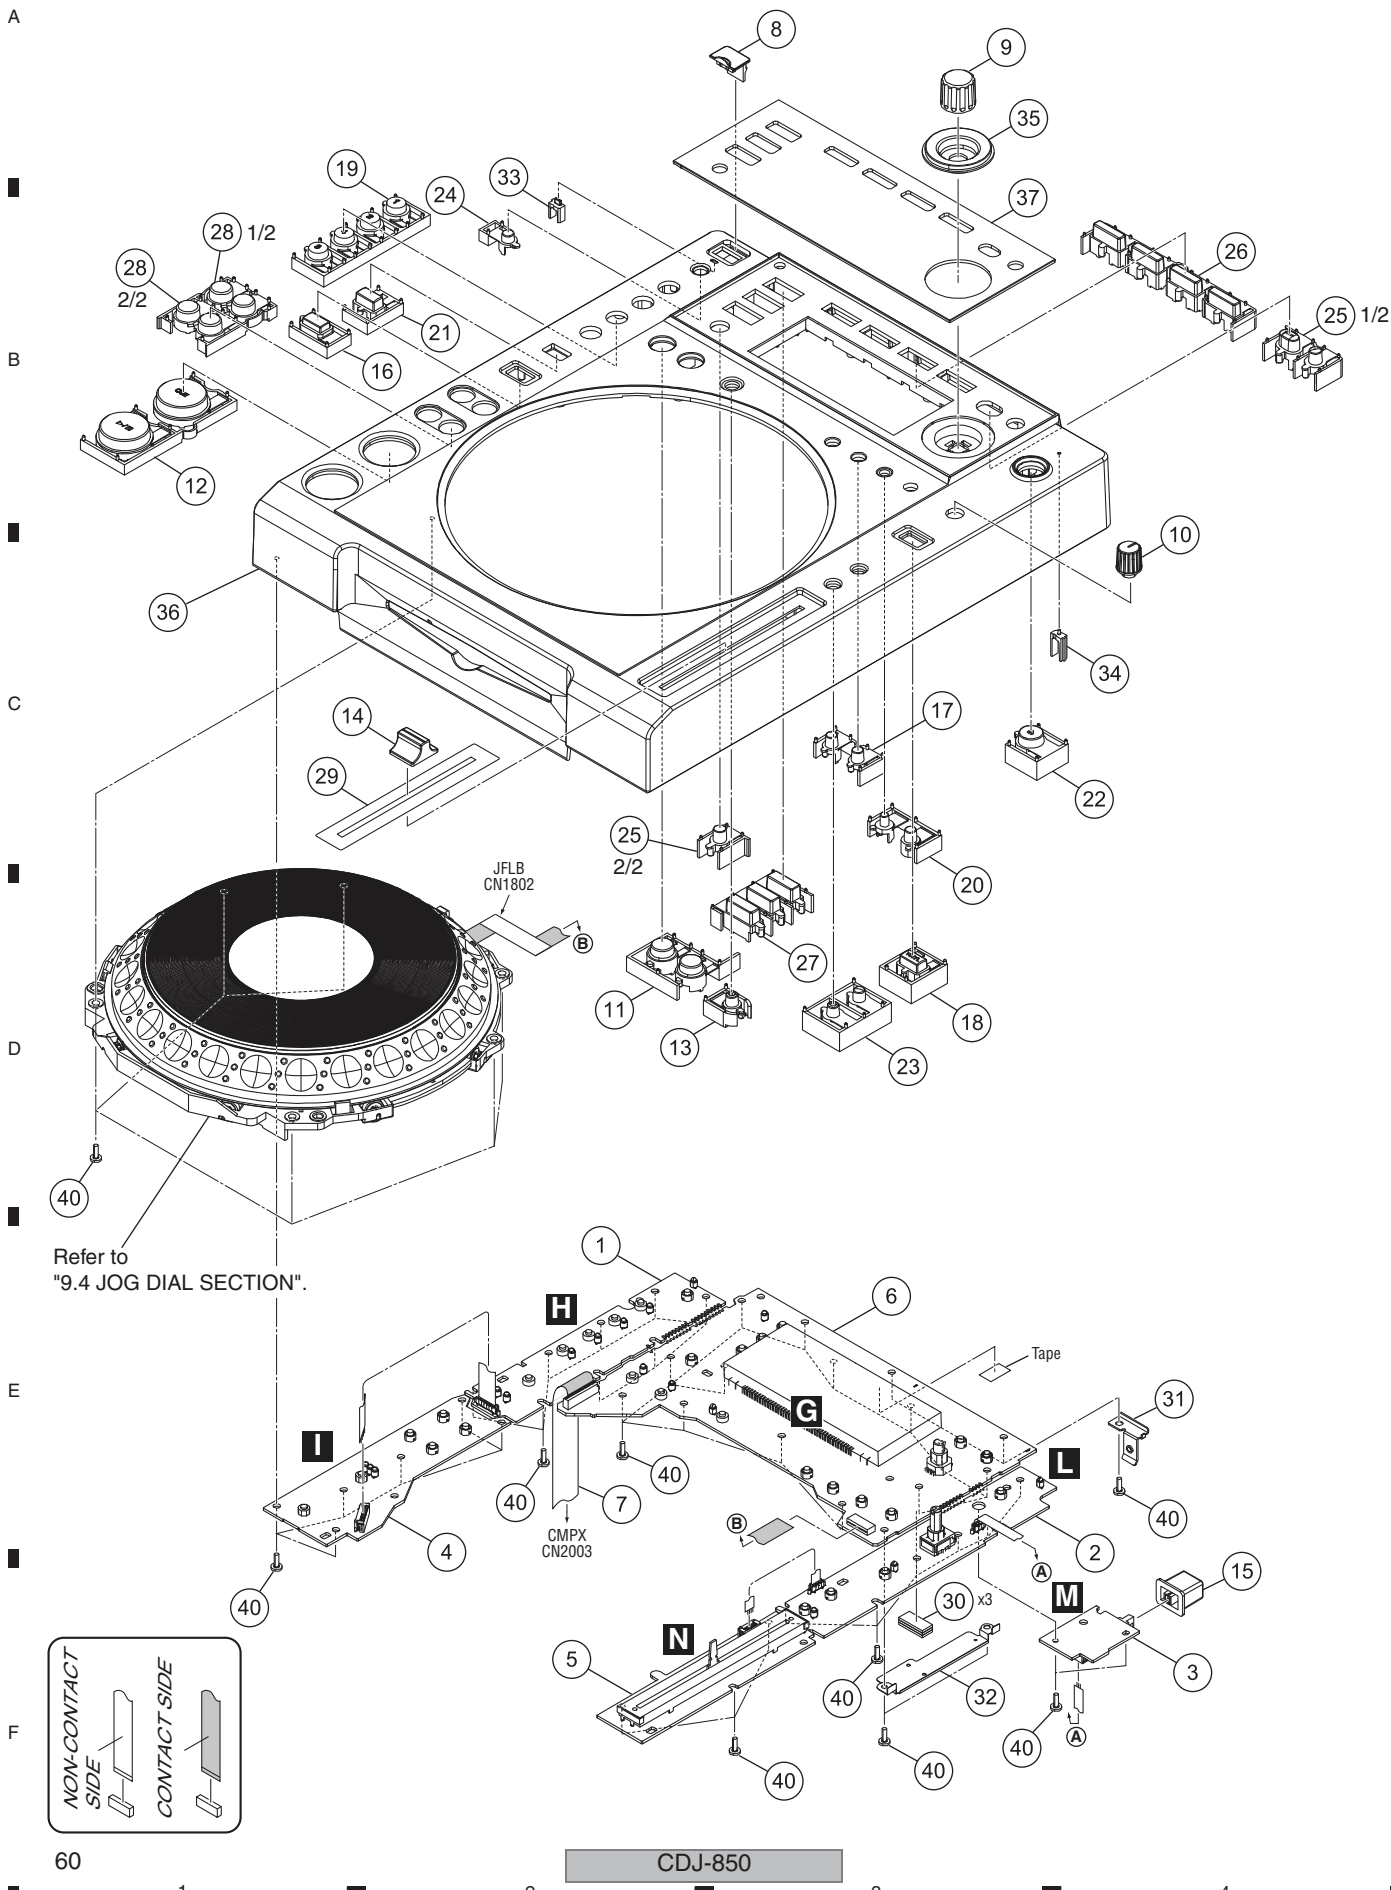

CONTROL PANEL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
NSP 1	KSW1 Assy	DWS1422
NSP 2	SLD1 Assy	DWS1423
3	PSWB Assy	DWS1424
4	KSW2 Assy	DWS1426
5	SLD2 Assy	DWS1427
6	DFLB Assy	DWX3152 *
7	21P FFC	DDD1522
8	USB Cover	DNK4999
9	Rotary Knob C	DAA1194
10	Dial Knob	DAA1259
11	Loop Knob	DAC2066
12	Play Knob	DAC2286
13	Reloop Knob	DAC2291
14	Slide Knob	DAC2292
15	Power Knob	DAC2306
16	Reverse Knob	DAC2364
17	Set Button (CALL)	DAC2497
18	Vinyl Knob	DAC2542
19	Auto Beat Roop Knob	DAC2543
20	Del/Memo Knob	DAC2545
21	Beat Select Button	DAC2546
22	Eject Button	DAC2548
23	Tempo Button	DAC2549
24	USB Stop Button	DAC2550
25	Back Button	DAC2613
26	Device Select Button	DAC2614
27	Mode Select Button	DAC2615
28	Search Button Silver	DAC2627
29	Slide Sheet 1C	DAH2404
NSP 30	Silicon Rubber D5 L	DEB1456
31	Earth Bracket	DNH2941
32	Heatsink	DNH2958
33	USB Lens	DNK5353
34	EUP Lens	DNK5408
35	Encoder Ring	DNK5489
⚠ 36	Control Panel	DNK5786
37	Display Window	DNK5793
38		
39		
40	Screw	BPZ30P080FNI

* The service part of DFLB Assy (DWX3152) is supplied with KSW1 Assy (DWS1422) and SLD1 Assy (DWS1423).
(There assemblies are connected with the jumper wires.)

9.4 JOG DIAL SECTION

A


B

C

D

E

F

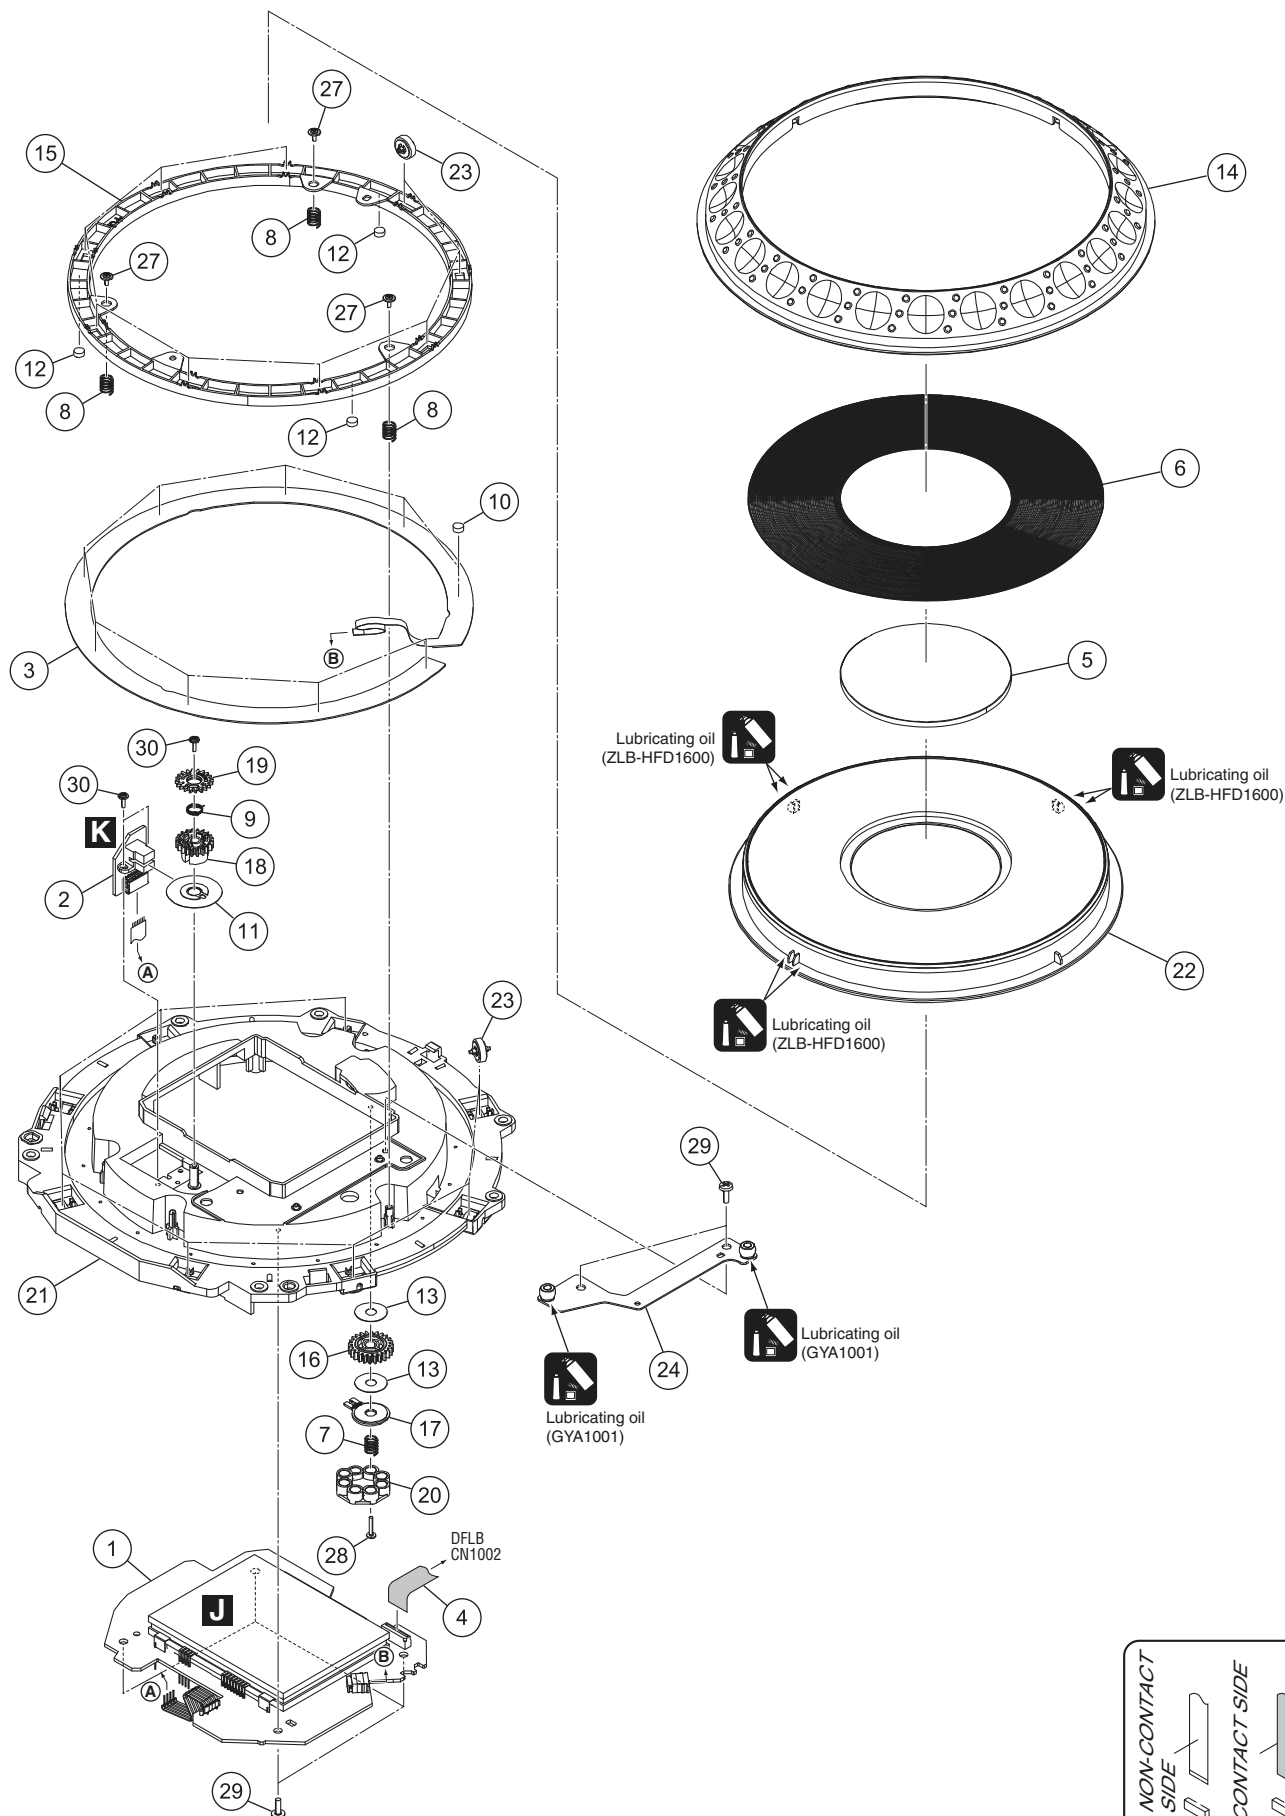

JOG DIAL SECTION PARTS LIST

Mark No.	Description	Part No.	
1	JFLB Assy	DWX3154	
2	JOGB Assy	DWX3155	A
3	Sheet SW	DSX1078	
4	13P FFC	DDD1521	
5	JOG Panel	DAH2609	
6	JOG Plate	DAH2839	
7	Load Spring	DBH1680	■
8	SW Spring	DBH1681	
9	Encoder Spring	DBH1710	
10	SW Cushion HH48/2	DEC2538	
11	Encoder Plate	DEC2889	B
12	Ring Cushion L24/2.0	DEC2958	
13	Washer	DEC3137	
14	JOG B	DNK4068	
15	SW Ring	DNK5233	■
16	Load Gear	DNK5236	
17	Smoother	DNK5237	
18	Gear A	DNK5241	
19	Gear B	DNK5242	
20	Adjust Plate	DNK5300	C
21	JOG Holder M	DNK5356	
22	JOG Dial A	DNK5357	
23	Roller A Assy	DXB2010	
24	JOG Stay Assy	DXB2015	
25			■
26			
27	Screw (FE)	DBA1265	
28	Screw	BPZ20P100FTC	
29	Screw	BPZ30P080FNI	D
30	Screw	IPZ20P060FTC	

SLOTIN MECHA SECTION PARTS LIST

Mark No.	Description	Part No.	
	1 SLMB Assy	DWS1425	
	2 TM Assy-S (VTM091)	DXX2616	A
	3 24P FFC	DDD1491	
	4 5P FFC	DDD1527	
NSP	5 SLOTIN MECHA Assy	DXA2206	
	6 Loading Motor Assy-S	DXX2615	
NSP	7 DC Motor	DXM1384	
NSP	8 Worm Gear	DNK3910	
	9 Lead Wire	ZWNN1007G28-8-06A	
	10 Lead Wire	ZWNN1007G28-9-06A	
	11 Clamp Spring	DBH1374	B
	12 Guide Spring	DBH1375	
	13 SW. Lever Spacer SV	DEC2831	
	14 Loading Lever	DNK3406	
	15 Main Cam	DNK3407	
	16 Disc Guide	DNK3478	
	17 Clamp Arm	DNK3576	
	18 Eject Lever	DNK3684	
	19 Lever AP	DNK3835	
	20 Lever BP	DNK3836	C
	21 Loading Gear	DNK3911	
	22 Drive Gear	DNK3912	
	23 Loading Base SV	DNK4369	
	24 SW Lever SV1	DNK4370	
	25 SW Lever SV2	DNK4371	
	26 Gear Holder SV	DNK4372	
	27 Clamper Assy-S	DXX2661	
	28 ●●●●●		
	29 ●●●●●		D
	30 Screw	BPZ20P060FTC	
	31 Spacer POR (T3)	DEB1566	
	32 Vessel Cushion (C)	DEC2854	
	33 Vessel Cushion T	DEC3349	
	34 Vessel Cushion U	DEC3350	
	35 Front Sheet	DED1132	
	36 Float Base 05 Assy	DXB2068	
	37 Floating Rubber	VEB1351	
	38 Binder	ZCA-SKB90BK	E

12. PCB PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

● The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56 $\times 10^1$ $\rightarrow$ 561 RD1/4PU $\begin{bmatrix} 5 & 6 & 1 \end{bmatrix}$ J

47 k Ω $\rightarrow$ 47 $\times 10^3$ $\rightarrow$ 473 RD1/4PU $\begin{bmatrix} 4 & 7 & 3 \end{bmatrix}$ J

0.5 Ω $\rightarrow$ R50 RN2H $\begin{bmatrix} R & 5 & 0 \end{bmatrix}$ K

1 Ω $\rightarrow$ 1R0 RS1P $\begin{bmatrix} 1 & R & 0 \end{bmatrix}$ K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k Ω $\rightarrow$ 562 $\times 10^1$ $\rightarrow$ 5621 RN1/4PC $\begin{bmatrix} 5 & 6 & 2 & 1 \end{bmatrix}$ F

● Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Mark	No.	Description	Part No.
------	-----	-------------	----------

LIST OF ASSEMBLIES

	1..MAIN ASSY	DWX3174
--	--------------	---------

NSP	1..SUB1 ASSY (SYXJ8, FLXJ, KXJ5, AXJ5)	DWM2399
-----	--	---------

NSP	1..SUB1 ASSY (CUXJ)	DWM2405
-----	---------------------	---------

NSP	2..KSW1 ASSY	DWS1422
-----	--------------	---------

NSP	2..SLD1 ASSY	DWS1423
-----	--------------	---------

	2..PSWB ASSY	DWS1424
--	--------------	---------

	2..SLMB ASSY	DWS1425
--	--------------	---------

	2..KSW2 ASSY	DWS1426
--	--------------	---------

	2..SLD2 ASSY	DWS1427
--	--------------	---------

	2..DFLB ASSY	DWX3152 *
--	--------------	-----------

	2..JFLB ASSY	DWX3154
--	--------------	---------

	2..JOGB ASSY	DWX3155
--	--------------	---------

	2..ACIN ASSY (SYXJ8, FLXJ, KXJ5, AXJ5)	DWX3158
--	--	---------

	2..ACIN ASSY (CUXJ)	DWX3173
--	---------------------	---------

NSP	1..SUB2 ASSY	DWM2400
-----	--------------	---------

	2..CNCT ASSY	DWX3151
--	--------------	---------

	2..CMPX ASSY	DWX3153
--	--------------	---------

	2..USBA ASSY	DWX3156
--	--------------	---------

	2..JINT ASSY	DWX3157
--	--------------	---------

$\triangle$	1..POWER SUPPLY ASSY	DWR1463
-------------	----------------------	---------

* The service part of DFLB Assy (DWX3152) is supplied with KSW1 Assy (DWS1422) and SLD1 Assy (DWS1423). (There assemblies are connected with the jumper wires.)

Mark	No.	Description	Part No.
------	-----	-------------	----------

A CNCT ASSY

MISCELLANEOUS

L	2501,2502 INDUCTOR	CTF1410
---	--------------------	---------

S	2501 SLIDE SWITCH	VSH1018
---	-------------------	---------

CN	2501,2502 24P FFC CONNECTOR	DKN1445
----	-----------------------------	---------

CAPACITORS

C	2501,2505	CKSRYB104K16
---	-----------	--------------

C	2502,2503	CKSRYB103K50
---	-----------	--------------

C	2504,2506	DCH1201
---	-----------	---------

Mark	No.	Description	Part No.
------	-----	-------------	----------

B SLMB ASSY

MISCELLANEOUS

S	1701,1702 PUSH SWITCH	DSG1017
---	-----------------------	---------

CN	1701 5P CONNECTOR	VKN1265
----	-------------------	---------

C JINT ASSY

MISCELLANEOUS

CN	2301 CONNECTOR	DKN1312
----	----------------	---------

CN	2302 24P FFC CONNECTOR	DKN1445
----	------------------------	---------

CN	2303 5P CONNECTOR	VKN1374
----	-------------------	---------

CN	2304 4P CONNECTOR	DKN1288
----	-------------------	---------

CN	2305 CONNECTOR	DKN1407
----	----------------	---------

RESISTORS

	All Resistors	RS1/10SR###J
--	---------------	--------------

CAPACITORS

C	2301,2307	CKSRYB103K50
---	-----------	--------------

D MAIN ASSY

SEMICONDUCTORS

IC	101	DYW1796
IC	102	K4S561632J-UC75

or

	H57V2562GTR-75C
	R5S72630P200FP
	TC74VHC04FT
	TS3USB30RSW

IC	201	TC94A15FG
IC	203	NJM2903M
IC	204	BD7956FS
IC	205	TC7W04FU
$\triangle$ IC	206	BA00BCOWFP

IC	301	DSPC56371AF180
IC	302	PCM1742KE
IC	303	RNB4580F
$\triangle$ IC	401	BA33BCOWFP
$\triangle$ IC	402,408	S-1170B33UC-OTS

$\triangle$ IC	403,404	BD00KA5WFP
$\triangle$ IC	405,406	NJM2872BF05
$\triangle$ IC	409	BD9326EFJ
Q	101,405,408	HN1C01FU

5			6			7			8		
Mark	No.	Description	Part No.	Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	Q	102,109,410,413	LTC124EUB		C	101,103-105,107	CKSSYB104K10				
					C	102,124,152,186	CKSSYB103K16				
	Q	104,107,303	RT3T22M		C	106,114,117,119	VCG1063				A
	Q	201	2SA1036K		C	108,122,126,150	CCSSCH331J50				
	Q	402,404,406,415	2SA1576A		C	109,110,214,320	CEHVAW101M6R3				
	Q	411	LSC4081UB								
	Q	414	LTA124EUB		C	111-113,115,116	CKSSYB104K10				
					C	118,120,125	CKSSYB104K10				
	D	101,103,405,406	1SS352		C	121,123,130,131	VCG1063				
	D	401	RSX201L-30		C	127-129,132,133	CKSSYB104K10				
					C	134,138,143,154	VCG1063				
MISCELLANEOUS					C	135-137,139-142	CKSSYB104K10				
	L	201-226,407,408 INDUCTOR	CTF1545		C	144-147,151,153	CKSSYB104K10				
	L	227-229 INDUCTOR	CTF1745		C	148,169	CCSRCH100D50				
	L	403 INDUCTOR	CTH1254		C	149,167	CCSRCH9R0D50				B
	F	101,102,301 EMI FILTER	DTL1106		C	155-158,160	CKSSYB104K10				
	F	401,402 FILTER	CTF1701								
	KN	404 WRAPPING TERMINAL	CKF1089		C	159,161,165,179	VCG1063				
	X	101 CRYSTAL (33 MHz)	DSS1193		C	162-164,170,174	CKSSYB104K10				
	X	102 CRYSTAL (48.000 MHz)	ASS7099		C	166,437	CKSRYB474K10				
	X	103 CRYSTAL RESONATOR (16.9344 MHz)	VSS1084		C	171,173	CCSRCH180J50				
	CN	201 CONNECTOR	DKN1404		C	176-178,272,274	CCSSCH331J50				
	CN	401 CONNECTOR	AKM1299		C	180,187-193,211	VCG1063				
	CN	402 27P CONNECTOR	RKN1068		C	184,254,271	CCSSCH101J50				
	CN	403 17P CONNECTOR	RKN1058		C	194,210,231,235	CKSSYB103K16				
					C	201,204,209,212	CKSSYB104K10				
					C	202,225,239,318	CEHVAW470M6R3				C
RESISTORS					C	203	CCSSCH470J50				
	R	101,102,106,107	RAB4CQ330J		C	205,220	CKSSYB153K16				
	R	103-105,108	RAB4CQ560J		C	206,207	CKSSYB223K16				
	R	110-113,132	RAB4CQ330J		C	208	CKSSYB102K50				
	R	134-136,138	RAB4CQ330J		C	213,217-219	CKSSYB104K10				
	R	156	RS1/16SS5601F								
					C	215	CKSSYB471K50				
	R	166,339,345,602	RS1/10SR0R0J		C	216	CKSSYB681K50				
	R	186-188	RAB4CQ560J		C	221-224,230,233	CKSSYB104K10				
	R	255	RS1/10SR222J		C	227	CCSSCH680J50				
	R	258,260-262	RS1/4SA1R0J		C	228,246,247,252	CEHVAW470M16				
	R	263,264	RS1/4SA2R7J								
					C	232,238	CKSSYB333K10				D
	R	265	RS1/10SR1002F		C	234,236,237,253	CKSSYB104K10				
	R	272,273	RS1/10SR683J		C	241	CKSRYB333K25				
	R	287,458	RS1/16SS1502F		C	242	CKSSYB331K50				
	R	288	RS1/16SS1003F		C	243	CKSSYB271K50				
	R	289,422,426	RS1/16SS3302F								
					C	244,245,250,263	CKSSYB104K16				
	R	291,411,423,459	RS1/16SS1202F		C	248	CCSSCH471J50				
	R	323,324,356,357	RS1/16SS4702D		C	249,251,260,262	CKSSYB103K16				
	R	325,326	RS1/16SS2200D		C	255	CKSRYB122K50				
	R	327,328,469	RS1/16SS2201D		C	256,259,301-303	CKSSYB104K10				
	R	329,332	RS1/16SS4701D								
					C	257,258	CKSRYB222K50				E
	R	330,331	RS1/16SS3301D		C	261,264,267,279	VCG1063				
	R	333,334	RS1/16SS5101D		C	265,436,455,461	CKSRYB104K16				
	R	410,485	RS1/16SS3601F		C	266,281,496	CKSRYB103K50				
	R	421	RS1/16SS2202F		C	268,276,278,340	CKSQYB225K10				
	R	424	RS1/16SS1102F								
					C	275,308,311,335	CCSSCH331J50				
	R	427	RS1/16SS5602F		C	280,283,309,312	VCG1063				
	R	436	RS1/16SS3301F		C	282,304,305,307	CKSSYB103K16				
	R	467	RS1/16SS7500F		C	306,310,313,314	CKSSYB104K10				
	R	468	RS1/16SS1102D		C	315,411,412	CEHVAW220M6R3				
	R	470,471,483	RS1/4SA0R0J								
					C	316,445,451,468	CCSRCH102J50				
	R	472-474,480,481	RS1/10SR330J		C	317,400,418,430	VCG1063				F
	R	484,502	RS1/16SS1002F		C	319,321,403,407	CKSSYB104K10				
	R	501	RS1/16SS1202F								
		Other Resistors	RS1/16SS###J								

CAPACITORS

Mark No. Description**Part No.****Mark No. Description****Part No.**

A

C 328,329 CCSRCH330J50
 C 331,333,431,448 CEHVAW470M16
 C 341,499,502 CKSQYB225K10
 C 342,414,416,435 CKSSYB103K16
 C 401,402,415,417 CKSRYB105K10

C 404,422,424,427 DCH1165
 C 408,420,423,438 CKSSYB104K10
 C 409,410 CKSSYB105K6R3
 C 413,428,432 CKSSYB104K16
 C 419 CKSRYB105K10

B

C 421,434,497,506 CCSSCH331J50
 C 440 CKSSYB222K50
 C 442,443 DCH1165
 C 444,453,458-460 CKSSYB104K10
 C 462,475,478,480 CKSSYB104K10

C 467,472-474,495 VCG1063
 C 470,498,504 CKSSYB103K16
 C 471 CCSRCH102J50
 C 483-485 CKSSYB221K50
 C 486-488,490 CCSSCH101J50

C

C 492-494 CCSSCH101J50
 C 501 VCG1063
 C 507 CCSSCH331J50

E CMPX ASSY SEMICONDUCTORS

⚠ IC 2001 SI-8005Q
 ⚠ IC 2002 NJM2845DL1-05
 IC 2003 BD2051AFJ
 Q 2014-2017 2SD2704K
 Q 2018 2SA1576A

D

Q 2019 UMD2N
 Q 2021 LTC124EUB
 Q 2026,2032 LTC143EUB
 Q 2027 LTA124EUB
 Q 2028 2SB1698

Q 2029 IMX2
 Q 2030 IMT2A
 Q 2031 2SD2662
 Q 2033 RN1902
 D 2002 CMS03

E

D 2003,2004 EP05Q06
 D 2005,2011,2012 1SS352
 D 2014 NNCD6.2MF
 D 2016 1SS355
 D 2017,2018 UDZS10(B)

D 2019 UDZS6R2(B)

MISCELLANEOUS

L 2001,2003,2006,2017 INDUCTOR CTF1488
 L 2002 INDUCTOR CTH1253
 L 2014,2015 CHIP SOLID INDUCTOR XTL3010
 F 2001 FILTER CTF1701
 JA 2001 USB CONNECTOR DKN1237

F

JA 2002 JACK VKB1243
 JA 2003 PIN JACK (2P) AKB7181
 CN2001 CONNECTOR B6B-XH-A
 CN2002 27P CONNECTOR VKN1258
 CN2003 21P CONNECTOR VKN1252

**RESISTORS**

CN2004 PLUG (13P) KM200NA13
 CN2005 5P JUMPER CONNECTOR 52147-0510
 CN2006 17P CONNECTOR VKN1248
 CN2007 PLUG (9P) KM200NA9
 P 2003 PROTECTOR (0.500 A) DEK1095
 P 2004 PROTECTOR (0.375 A) DEK1094

R 2002 RST1/2SP120J
 R 2004 RS1/10SR6802D
 R 2005 RS1/10SR4701D
 R 2006 RS1/10SR5101D
 R 2026,2027,2047-2049 RS1/8SQ0R0J

R 2051,2089,2090 RS1/8SQ0R0J
 R 2059,2060 RS1/8SQ473J
 R 2061,2062,2066,2067 RS1/8SQ151J
 R 2076,2080 RS1/8SQ272J
 R 2077-2079,2081 RS1/8SQ222J

Other Resistors RS1/10SR###J

CAPACITORS

C 2001,2077,2079,2102 CKSRYB104K50
 C 2002,2004,2015,2097 CCG1221
 C 2003,2012,2090,2091 ACG1142
 C 2005,2022,2093 CEHVAW470M16
 C 2006 CCSRCH102J50

C 2007,2008 CKSRYB222K50
 C 2009,2074,2078,2080 CKSRYB103K50
 C 2010,2011,2073 CKSRYB105K16
 C 2014 CCSRCH122J50
 C 2019 CKSRYB224K16

C 2020 CCH1565
 C 2021 CKSRYB104K16
 C 2033 CKSRYB474K10
 C 2036 DCH1201
 C 2075,2076 CEVW221M10

C 2082,2083 CFHXSQ471J50
 C 2084,2086 CKSRYB103K50
 C 2088 CEVW471M16
 C 2092,2094 CKSQYB475K16
 C 2095,2096 CKSQYB105K16

F USBA ASSY SEMICONDUCTORS

D 2201 NNCD6.2MF

MISCELLANEOUS

JA 2201 USB CONNECTOR DKB1106
 JH 2201 5P CABLE HOLDER 51048-0500
 JP 2201 JUMPER WIRE D20PDY0510E

CAPACITORS

C 2201 CEHVAW101M6R3
 C 2202 CKSRYB103K50
 C 2203 CEVQW220M16
 C 2204 CCSRCH102J50

G DFLB ASSY SEMICONDUCTORS

⚠ IC 1001 NJM2392M

5

6

7

8

Mark	No.	Description	Part No.
	IC	1004	BD45302G
⚠	IC	1006	SI-8105QL
	IC	1007	PEG799A8
	Q	1001-1006,1009	LTC124EUB
	Q	1011-1013,1019,1020	LTC124EUB
	Q	1014	LTA124EUB
	Q	1016,1017	2SC4081
	Q	1018	RTQ040P02
	Q	1021	2SD1898
	Q	1022-1024	2SA1576A
	Q	1025	LTC124EUB
	D	1001,1007,1010,1012	SLI-343Y8C(KLMN)
	D	1002,1003,1013-1016	SLI-343M8C(FGHJ)
	D	1009	EP05Q06
	D	1018	CMS03
MISCELLANEOUS			
	L	1001,1003,1008-1010 INDUCTOR	CTF1579
	L	1002 RADIAL LEAD INDUCTER	DTH1206
	L	1004,1007,1012 INDUCTOR	CTF1378
	L	1005 INDUCTOR	CTF1357
	L	1006 POWER INDUCTOR	DTL1185
	L	1011 INDUCTOR	CTF1334
	V	1001 VFD	DEL1069
	S	1001-1004,1007-1009 SWITCH	VSG1024
	S	1005,1006,1010 TACT SWITCH	DSG1079
	S	1011-1017 SWITCH	VSG1024
	S	1018 ROTARY SW	YSD5019
	X	1001 CRYSTAL RESONATOR (15.975 MHz)	DSS1166
	CN	1001 21P CONNECTOR	VKN1252
	CN	1002 13P CONNECTOR	VKN1273
	O	FL HOLDER	DNF1862
RESISTORS			
	R	1021	RS1/4SA2R7J
	R	1042,1173	RS1/10SR3301D
	R	1043,1172	RS1/10SR3302D
	R	1044	RS1/10SR2202D
	R	1109	RST1/2SP120J
	R	1114	RS1/10SR5602D
	R	1115	RS1/10SR1501D
	R	1116,1175,1176	RS1/10SR4701D
	R	1142	RS1/10SR2701F
	R	1144	RS1/10SR1001F
	R	1145-1149	RS1/4SA240J
		Other Resistors	RS1/10SR###J
CAPACITORS			
	C	1004,1042,1045,1057	ACG1128
	C	1005,1031,1034,1062	DCH1201
	C	1006	CEHAZL680M16
	C	1007,1079	CKSRYB104K50
	C	1008,1017,1029,1032	CKSRYB104K16
	C	1009-1014,1018,1019	CCSRCH102J50
	C	1015	CKSRYB474K10
	C	1016	CEHAS101M10
	C	1021,1038,1040,1043	CCSRCH470J50
	C	1022,1023	CCSRCH220J50
	C	1024	CCSRCH560J50
	C	1025,1028	CCSRCH270J50
	C	1027,1078	CCSRCH221J50
	C	1030	CEHAZL221M6R3

Mark	No.	Description	Part No.
	C	1035,1044,1046,1049	CKSRYB103K50
	C	1036,1041,1072	CKSRYB104K16
	C	1047,1064-1066	CCSRCH102J50
	C	1048	CKSQYB102K50
	C	1050	CKSRYB103K50
	C	1055	CCSRCH182J50
	C	1061	DCH1324
	C	1063,1076	DCH1201
	C	1067	CKSRYB474K16
	C	1070	CKSRYB105K16
	C	1074,1075	CCSRCH470J50
	C	1077	CCSRCH101J50
H KSW1 ASSY			
SEMICONDUCTORS			
	Q	1201-1206	LTC124EUB
	D	1201,1202,1207	SLI-343U8RC(HJKL)
	D	1203-1206	SLI-343Y8C(KLMN)
MISCELLANEOUS			
	S	1201-1206 TACT SWITCH	DSG1079
	S	1207 SWITCH	VSG1024
RESISTORS			
		All Resistors	RS1/10SR###J
MISCELLANEOUS			
	JH	1201 7P CABLE HOLDER	51048-0700
	JP	1201 JUMPER WIRE	D20PDY0720E
I KSW2 ASSY			
SEMICONDUCTORS			
	Q	1401,1402	LTC124EUB
	D	1401,1403	SLI-343M8C(FGHJ)
	D	1402,1404	SLI-343Y8C(KLMN)
MISCELLANEOUS			
	S	1401,1402 TACT SWITCH	DSG1117
	S	1403-1406 SWITCH	VSG1024
	CN	1401 7P JUMPER CONNECTOR	52147-0710
RESISTORS			
		All Resistors	RS1/10SR###J
J JFLB ASSY			
SEMICONDUCTORS			
⚠	IC	1802	TLC555IP
⚠	IC	1803	NJM2374AD
	Q	1801,1802	2SC1815
	Q	1803	2SB1237X
	Q	1804,1806	LTC124EUB
	Q	1805,1808	2SD1767
	Q	1807	RHP020N06
	D	1801	UDZS6R8(B)
	D	1802,1803,1805,1806	RB160M-60
	D	1804	UDZS10(B)
	D	1807	1SS355
	D	1808,1809	RB160M-60

Mark	No.	Description	Part No.
------	-----	-------------	----------

MISCELLANEOUS

L 1801	INDUCTOR	CTF1579
L 1802	POWER INDUCTOR	DTL1187
V 1801	FL INDICATOR TUBE	DEL1058
T 1801	POWER TRANSFORMER	DTT1232
CN 1801	CONNECTOR	CKS1072
CN 1802	13P CONNECTOR	VKN1244
O	FL HOLDER	DNF1735
JH 1801	4P CABLE HOLDER	51048-0400
JP 1801	JUMPER WIRE	D20PHY0405E

RESISTORS

R 1820,1821,1848,1849	RS1/4SA102J
R 1822	RST1/2SP1R0J
R 1823	RS1/4SA0R0J
R 1824	RS1/4SAR51J
R 1825	RS1/4SA331J

R 1826	RS1/8SQ102J
R 1827	RS1/8SQ101J
R 1828,1832	RS1/4SA271J
R 1829,1830	RS1/8SQ181J
R 1833	RS1/4SA103J

R 1834	RS1/10SR1201D
R 1835	RS1/10SR1602D
R 1836	RS1/10SR6802D
R 1837	RS1/10SR4302D
R 1838,1839	RS1/10SR2201D

R 1840	RS1/8SQ223J
R 1846,1847,1850-1853	RS1/4SA222J
Other Resistors	RS1/10SR###J

CAPACITORS

C 1802	CKSRYB223K16
C 1803	CEHAR470M16
C 1804,1806	CKSRYB104K16
C 1808	CCSRCH470J50
C 1809-1811,1821	CCSRCH101J50

C 1812	CEHAZL100M50
C 1813,1823,1827,1828	CKSRYB104K50
C 1814,1816	CCG1255
C 1815	CEHAR101M10
C 1817	CEHAR100M50

C 1818,1819	ACG1147
C 1820	CCSRCH221J50
C 1824,1831	CEHAZL220M50
C 1826	CEHAZL221M25-P35
C 1829	CCSRCH331J50

K JOGB ASSY**MISCELLANEOUS**

CN 1901	4P JUMPER CONNECTOR	52151-0410
---------	---------------------	------------

RESISTORS

All Resistors	RS1/10SR###J
---------------	--------------

MISCELLANEOUS

PC 1901	PHOTO INTERRUPTER	SEDS-7573
---------	-------------------	-----------

CAPACITORS

C 1901,1902	CKSRYB103K50
-------------	--------------

Mark	No.	Description	Part No.
------	-----	-------------	----------

L SLD1 ASSY**SEMICONDUCTORS**

Q 1301-1303	LTC124EUB
Q 1304,1305	2SA1576A
D 1301,1303	SLI-343U8RC(HJKL)
D 1302	SLR343BC4T(JKLM)
D 1304	SLI-343M8C(FGHJ)

MISCELLANEOUS

L 1302-1304 INDUCTOR	CTF1334
VR 1301 POTENTIOMETER	DCS1062
S 1301-1304 SWITCH	VSG1024

RESISTORS

All Resistors	RS1/10SR###J
---------------	--------------

MISCELLANEOUS

JH 1301 4P CABLE HOLDER	51048-0400
JH 1302 3P CABLE HOLDER	51048-0300
JP 1301 JUMPER WIRE	D20PDY0410E
JP 1302 3P JUMPER WIRE	D20PDY0310E

CAPACITORS

C 1307	CKSRYB103K50
--------	--------------

M PSWB ASSY**MISCELLANEOUS**

S 1601 PUSH SW	ASG1102
CN 1601 3P JUMPER CONNECTOR	52147-0310

RESISTORS

All Resistors	RS1/10SR###J
---------------	--------------

N SLD2 ASSY**SEMICONDUCTORS**

D 1501-1504	1SS352
-------------	--------

MISCELLANEOUS

VR 1501 VR	DCV1009
CN 1501 4P JUMPER CONNECTOR	52147-0410

CAPACITORS

C 1501	CEJQ470M16
C 1502,1503	CKSRYB104K16

O POWER SUPPLY ASSY

There is no service parts.

P ACIN ASSY (DWX3158)**MISCELLANEOUS**

⚠ JA 2401 AC INLET	DKP3889
⚠ JP 2401 CONNECTOR ASSY 2P	DKP3870

P ACIN ASSY (DWX3173)**MISCELLANEOUS**

⚠ JA 2401 AC INLET	DKP3891
⚠ JP 2401 CONNECTOR ASSY 2P	DKP3870