

■ 1 ■ 2 ■ 3 ■ 4 ■

B

C

D

E

F

■ 1 ■ 2 ■ 3 ■ 4 ■

DJM-850-K

(1) EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	USBI Assy	DWX3361	26	Terminal Screw	AKE-031	
2	INPUT Assy	DWX3362	27	Front Panel	DNK6063	A
3	HPJK Assy	DWX3363	28	Knob/MIC	DAA1301	
4	MIC1 Assy	DWX3371	NSP 29	Label	See Contrast table (2)	
5	MTRM Assy	DWX3372	NSP 30	Label	See Contrast table (2)	
6	Short Pin Plug	AKM7008	NSP 31	Caution Label	See Contrast table (2)	
7	Shielded Conn-Cable	DDA1043	NSP 32	V Select Label	See Contrast table (2)	
8	FFC/25P	DDD1597	33	•••••		
9	FFC/22P	DDD1598	34	Flange Nut M9	DBN1008	
10	Connector Assy (J2)	PF04PP-S05	35	Nut M12	DBN1018	
11	Cable (J3)	PF04PP-S17	36	Nut (M12)	NKX2FNI	B
12	Stay/HP	DNF1907	37	Washer	DEC2920	
13	Shield Plate/INP	DNF1908	38	Screw (FE)	See Contrast table (2)	
14	Bracket/USB	DNF1909	39	Screw (M3*5)	DBA1340	
15	Bracket/MIC	DNF1910	40	Screw	BBZ30P060FTB	
16	Stay/INP	DNF1911	41	Screw	BBZ30P060FTC	
17	Cover/PCB	DNK6136	42	Screw	BBZ40P060FTB	
18	Nylon Rivet	AEC1671	43	Screw	BPZ30P080FTB	
19	Locking Mini Clamp	DEC2439	44	Screw	BPZ30P120FTB	
20	Holder	VEC1355	45	Screw	PMH30P100FTB	C
21	USB Cover B	DNK5868				
22	Side Panel L	DNK6061				
23	Side Panel R	See Contrast table (2)				
24	Panel/USB	DNK6120				
25	Knob/POW	See Contrast table (2)				

(2) CONTRAST TABLE

DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5
NSP NSP	23	Side Panel R	DNK6062	DNK6062	Not used	DNK6062	DNK6062
	23	Side Panel R/G	Not used	Not used	DNK6065	Not used	Not used
	25	Knob/POW	Not used	Not used	DNK6066	Not used	Not used
	29	Label	DAL1207	DAL1208	DAL1209	DAL1212	DAL1211
	30	Label	Not used	DRW1975	Not used	Not used	Not used
NSP	31	Caution Label	Not used	DRW2429	DRW2430	DRW2542	Not used
NSP	32	V Select Label	Not used	Not used	DRW2400	Not used	Not used
	38	Screw (FE)	DBA1290	DBA1290	DBA1290	DBA1290	DBA1290
Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5
NSP NSP	23	Side Panel R	DNK6062	DNK6062	Not used	DNK6062	DNK6062
	23	Side Panel R/G	Not used	Not used	DNK6065	Not used	Not used
	25	Knob/POW	Not used	Not used	DNK6066	Not used	Not used
	29	Label	DAL1213	DAL1214	DAL1215	DAL1218	DAL1217
	30	Label	Not used	DRW1975	Not used	Not used	Not used
NSP	31	Caution Label	Not used	DRW2429	DRW2430	DRW2542	Not used
NSP	32	V Select Label	Not used	Not used	DRW2400	Not used	Not used
	38	Screw (FE)	DBA1436	DBA1436	DBA1436	DBA1436	DBA1436

9.3 BOTTOM SECTION

A


B

C

D

E

F

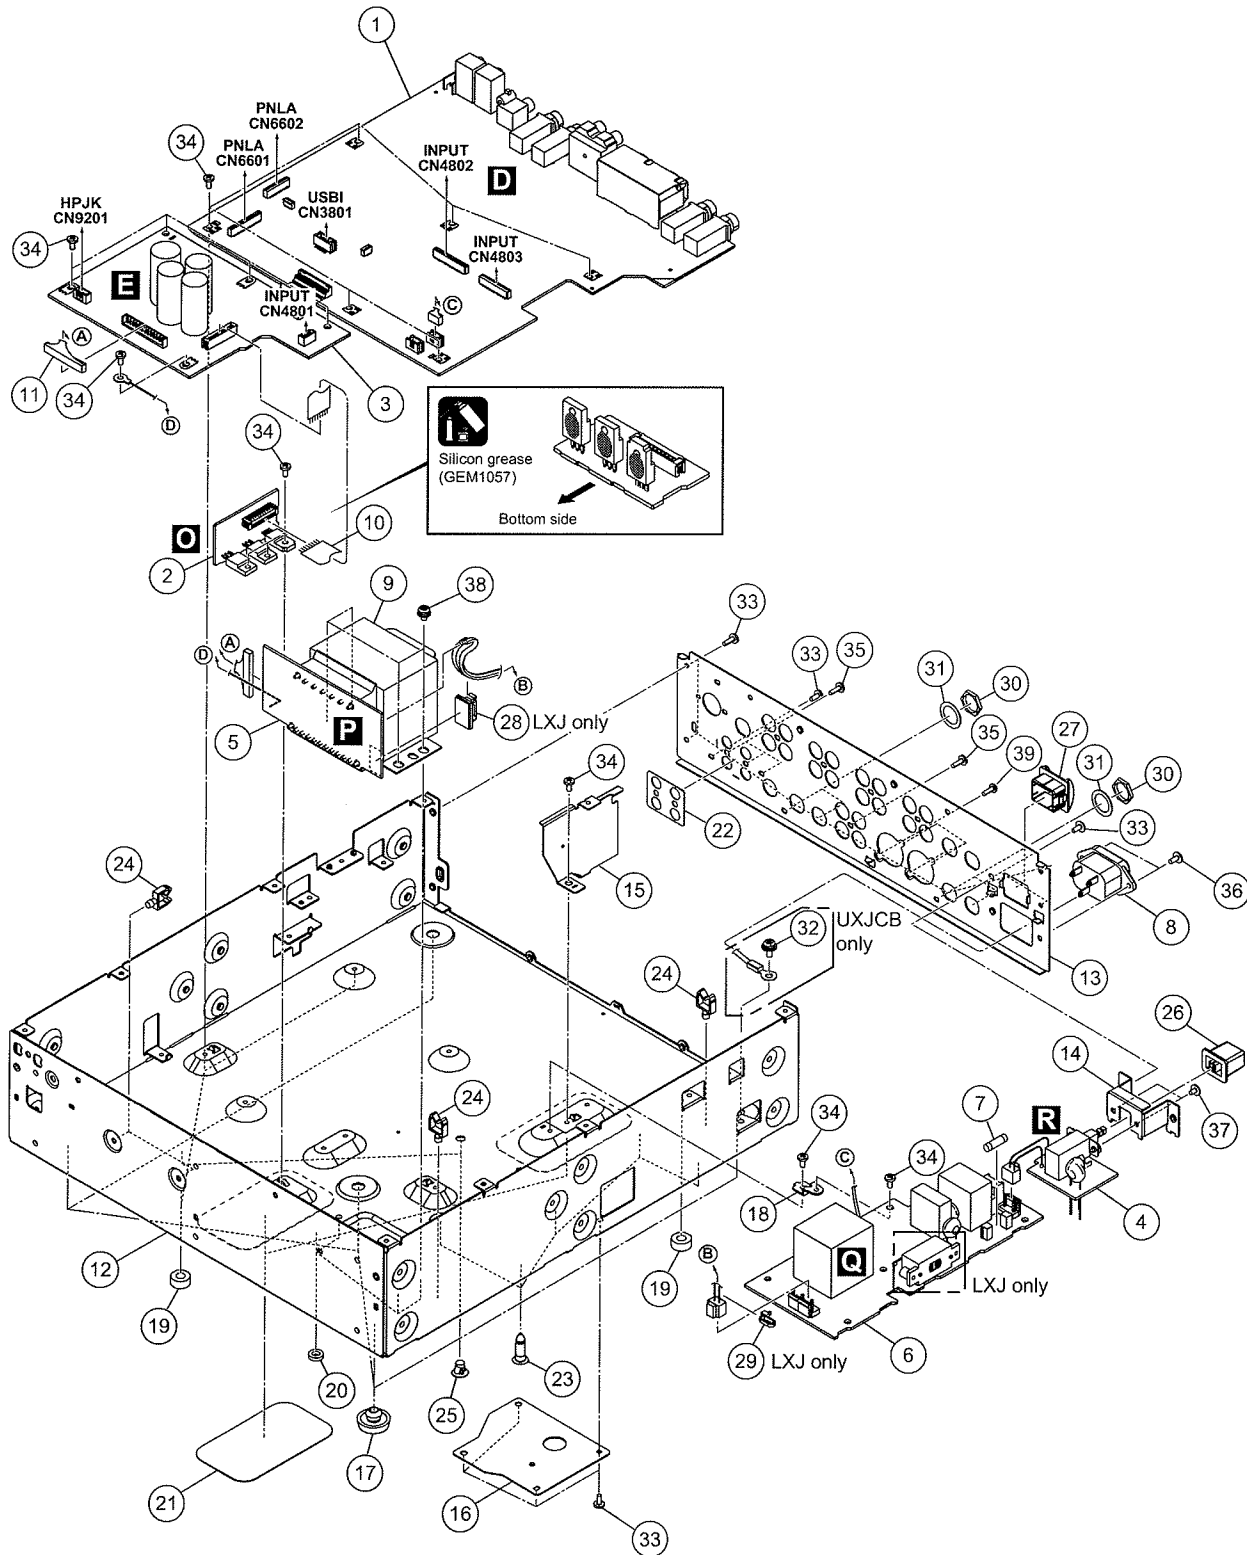

(1) BOTTOM SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	MAIN Assy	DWX3360	21	Sheet/BOT	DEC3404	
2	REG Assy	DWR1510	NSP 22	Insulating Sheet	DMR1010	A
3	SEC/HP Assy	DWR1511	23	PCB Holder	PNW2029	
4	ACSW Assy	DWR1515	24	Holder	VEC1355	
5	TRANS Assy	See Contrast table (2)	NSP 25	PC Support	VEC1749	
6	PRIMARY Assy	See Contrast table (2)	26	Power Knob	DAC2306	
⚠ 7	Fuse (FU1: T630 mA)	AEK1052	27	Power Knob Guard	DNK4534	
⚠ 8	AC Inlet	See Contrast table (2)	28	Locking Wire Saddle	See Contrast table (2)	
⚠ 9	Transformer/L (T3101)	See Contrast table (2)	29	Binder	See Contrast table (2)	
10	Jumper Wire (J1)	D20PYY1010E	30	Nut (M12)	NKX2FNI	
11	Connector Assy (J4)	PF13EE-S17	31	Washer	DEC2920	B
NSP 12	Chassis	DNA1437	32	Screw	See Contrast table (2)	
13	Rear Panel	See Contrast table (2)	33	Screw	BBZ30P060FTB	
14	Bracket PSW	DNF1759	34	Screw	BBZ30P060FTC	
15	Shield Plate/PW	DNF1906	35	Screw	BPZ30P080FTB	
NSP 16	Plate	DNK6124	36	Screw	IBZ30P080FTB	
17	Foot (Rubber)	REC-434	37	Screw	IMZ30P040FTC	
NSP 18	PCB Stay (FE)	VNE2489	38	Screw	PMB40P060FTB	
NSP 19	Spacer	AEB7092	39	Screw	PPZ30P080FTB	
20	Spacer	DEB1998				C


(2) CONTRAST TABLE

DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5	
	5	TRANS Assy	DWR1516	DWR1517	DWR1512	DWR1516	DWR1516	
	6	PRIMARY Assy	DWR1519	DWR1520	DWR1509	DWR1519	DWR1519	D
⚠	8	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916	
⚠	8	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used	
⚠	9	Transformer/L (T3101)	DTT1256	DTT1257	DTT1256	DTT1256	DTT1256	
	13	Rear Panel	DNC2069	DNC2070	DNC2081	DNC2082	DNC2073	
	28	Locking Wire Saddle	Not used	Not used	DEC3439	Not used	Not used	
	29	Binder	Not used	Not used	ZCA-SKB90BK	Not used	Not used	
	32	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used	

Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5	
	5	TRANS Assy	DWR1516	DWR1517	DWR1512	DWR1516	DWR1516	
	6	PRIMARY Assy	DWR1519	DWR1520	DWR1509	DWR1519	DWR1519	E
⚠	8	AC Inlet/2P	DKP3916	Not used	DKP3916	DKP3916	DKP3916	
⚠	8	AC Inlet/3P	Not used	DKP3915	Not used	Not used	Not used	
⚠	9	Transformer/L (T3101)	DTT1256	DTT1257	DTT1256	DTT1256	DTT1256	
	13	Rear Panel	DNC2069	DNC2070	DNC2081	DNC2082	DNC2073	
	28	Locking Wire Saddle	Not used	Not used	DEC3439	Not used	Not used	
	29	Binder	Not used	Not used	ZCA-SKB90BK	Not used	Not used	
	32	Screw	Not used	PMH40P080FTC	Not used	Not used	Not used	

9.4 CONTROL PANEL SECTION (1/2)

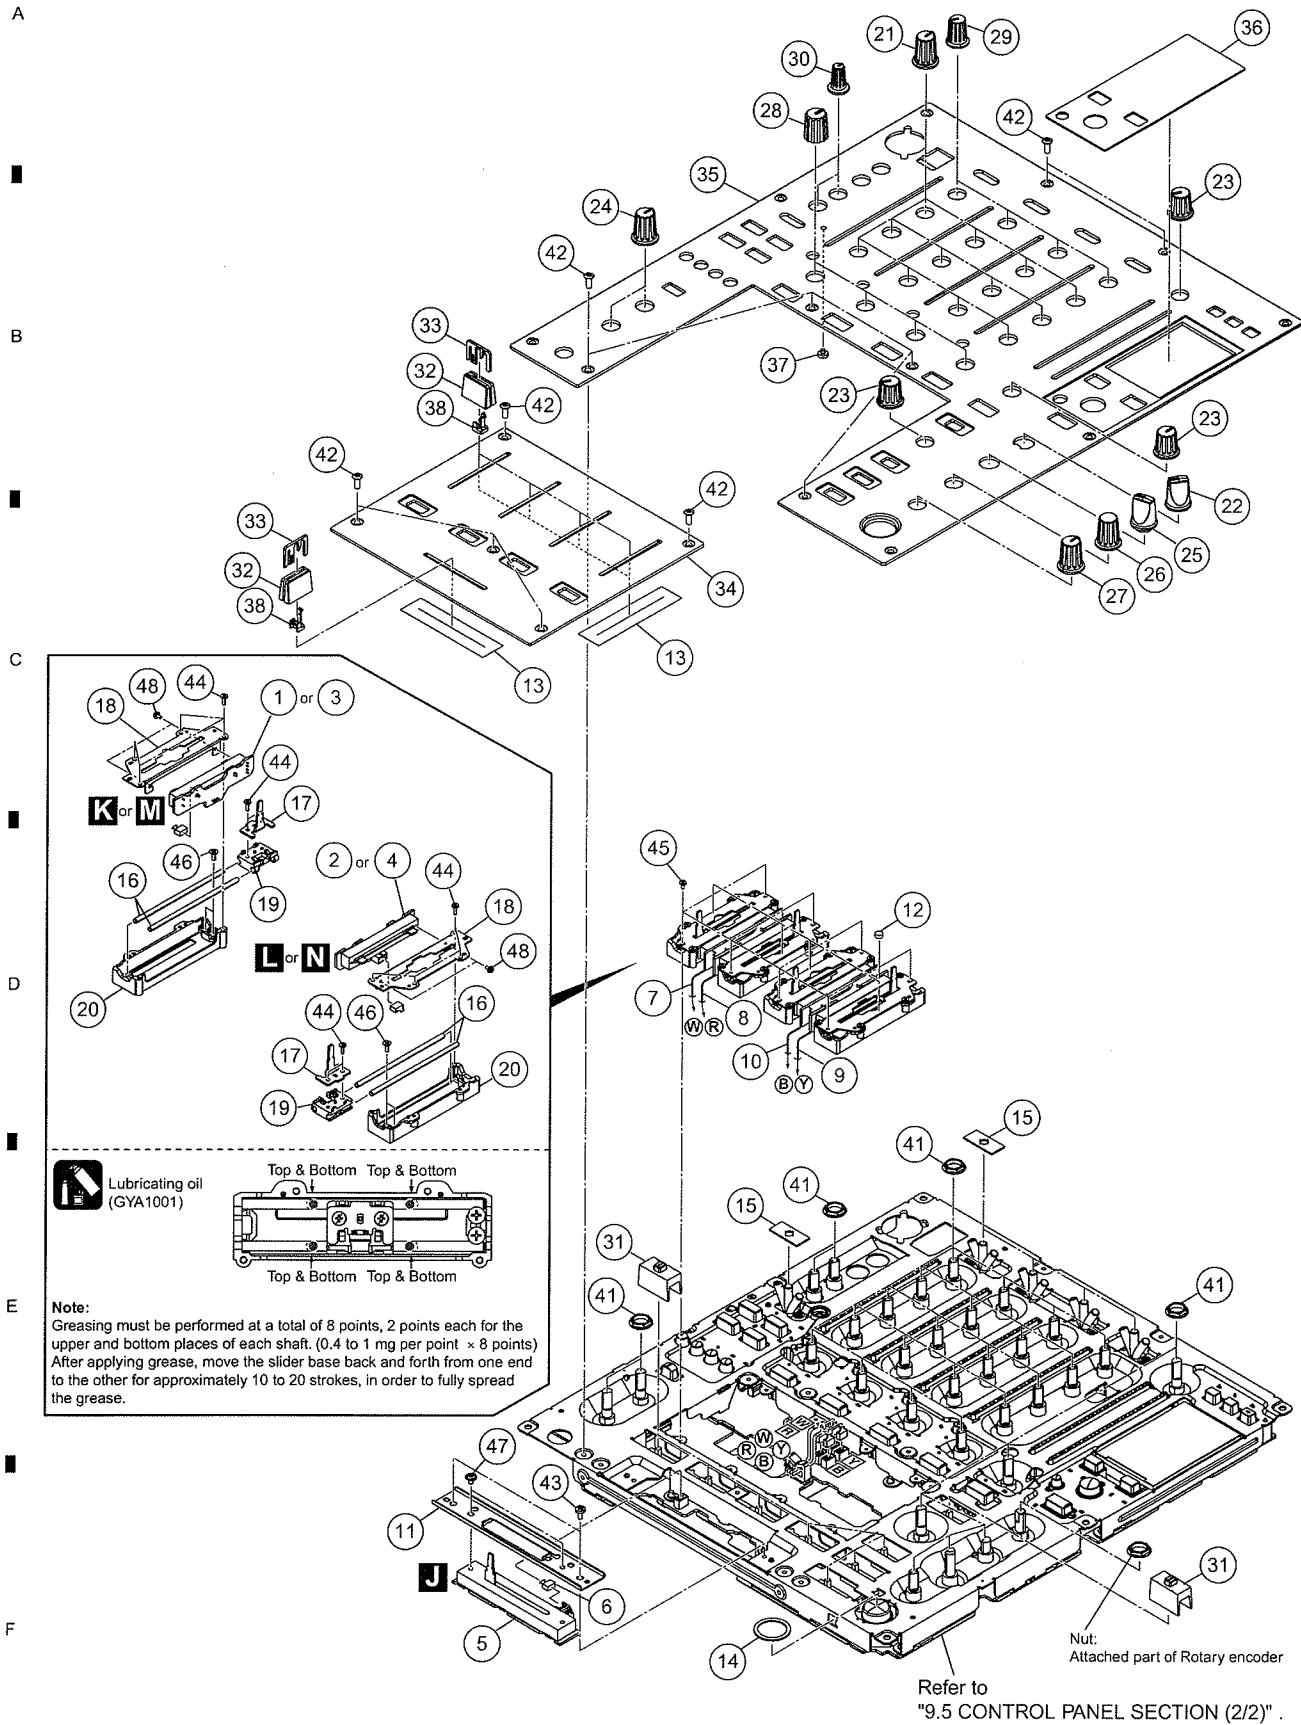

(1) CONTROL PANEL SECTION (1/2) PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	FAD1 Assy	DWX3366	26	Knob (TIME)	DAA1214
2	FAD2 Assy	DWX3367	27	Rotary Knob (BN)	DAA1220
3	FAD3 Assy	DWX3368	28	Rotary SW Knob (HM)	DAA1256
4	FAD4 Assy	DWX3369	29	Knob/CH	DAA1300
5	FADC Assy	DWX3370	30	Knob/EQ	DAA1302
6	Connector Assy	PF03PP-B07	31	Slide SW Cap (W)	DAC2401
7	Connector Assy	PF03PP-B12	32	Slider Knob 1	DAC2684
8	Connector Assy	PF03PP2B07	33	Slider Knob 2	DAC2685
9	Connector Assy	PF03PP4B12	34	Fader Panel	See Contrast table (2)
10	Connector Assy	PF03PP6B07	35	Control Panel	See Contrast table (2)
11	CRF Stay	DNF1870	36	Panel/FL	DAH2877
12	SW Cushion HH48/2	DEC2538	37	Lens	DNK4532
13	Fader Packing	DEC2903	38	Slider Knob Stopper	DNK5888
14	SW Packing (EF)	DEC2929	39		
15	SW Packing	DED1177	40		
NSP 16	Guide Shaft (S)	DLA1918	41	Flange Nut M9	DBN1008
17	Lever Plate	DNH2954	42	Screw (FE)	See Contrast table (2)
18	VR Stay	DNH2955	43	Screw	BBZ30P060FTC
19	Slider Base	DNK5851	44	Screw	BPZ20P060FTC
20	Shaft Holder	DNK5852	45	Screw	BSZ20P040FTB
21	Rotary SW Knob (B)	DAA1176	46	Screw	CPZ26P080FTC
22	Select Knob	DAA1205	47	Screw	IMZ30P040FTC
23	Knob (MA)	DAA1210	48	Screw	PMH20P040FTC
24	Knob (Black)	DAA1212			
25	FX SEL Knob	DAA1213			

(2) CONTRAST TABLE


DJM-850-K/SYXJ8, UXJCB, LXJ, KXJ5, XJCN5, DJM-850-S/SYXJ8, UXJCB, LXJ, KXJ5 and XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K /SYXJ8	DJM-850-K /UXJCB	DJM-850-K /LXJ	DJM-850-K /KXJ5	DJM-850-K /XJCN5
	34	Fader Panel	DNB1196	DNB1196	DNB1196	DNB1196	DNB1196
	35	Control Panel	DNB1197	DNB1197	DNB1197	DNB1197	DNB1197
	42	Screw (FE)	DBA1290	DBA1290	DBA1290	DBA1290	DBA1290

Mark	No.	Symbol and Description	DJM-850-S /SYXJ8	DJM-850-S /UXJCB	DJM-850-S /LXJ	DJM-850-S /KXJ5	DJM-850-S /XJCN5
	34	Fader Panel	DNB1201	DNB1201	DNB1201	DNB1201	DNB1201
	35	Control Panel	DNB1202	DNB1202	DNB1202	DNB1202	DNB1202
	42	Screw (FE)	DBA1436	DBA1436	DBA1436	DBA1436	DBA1436

9.5 CONTROL PANEL SECTION (2/2)

A • Bottom view

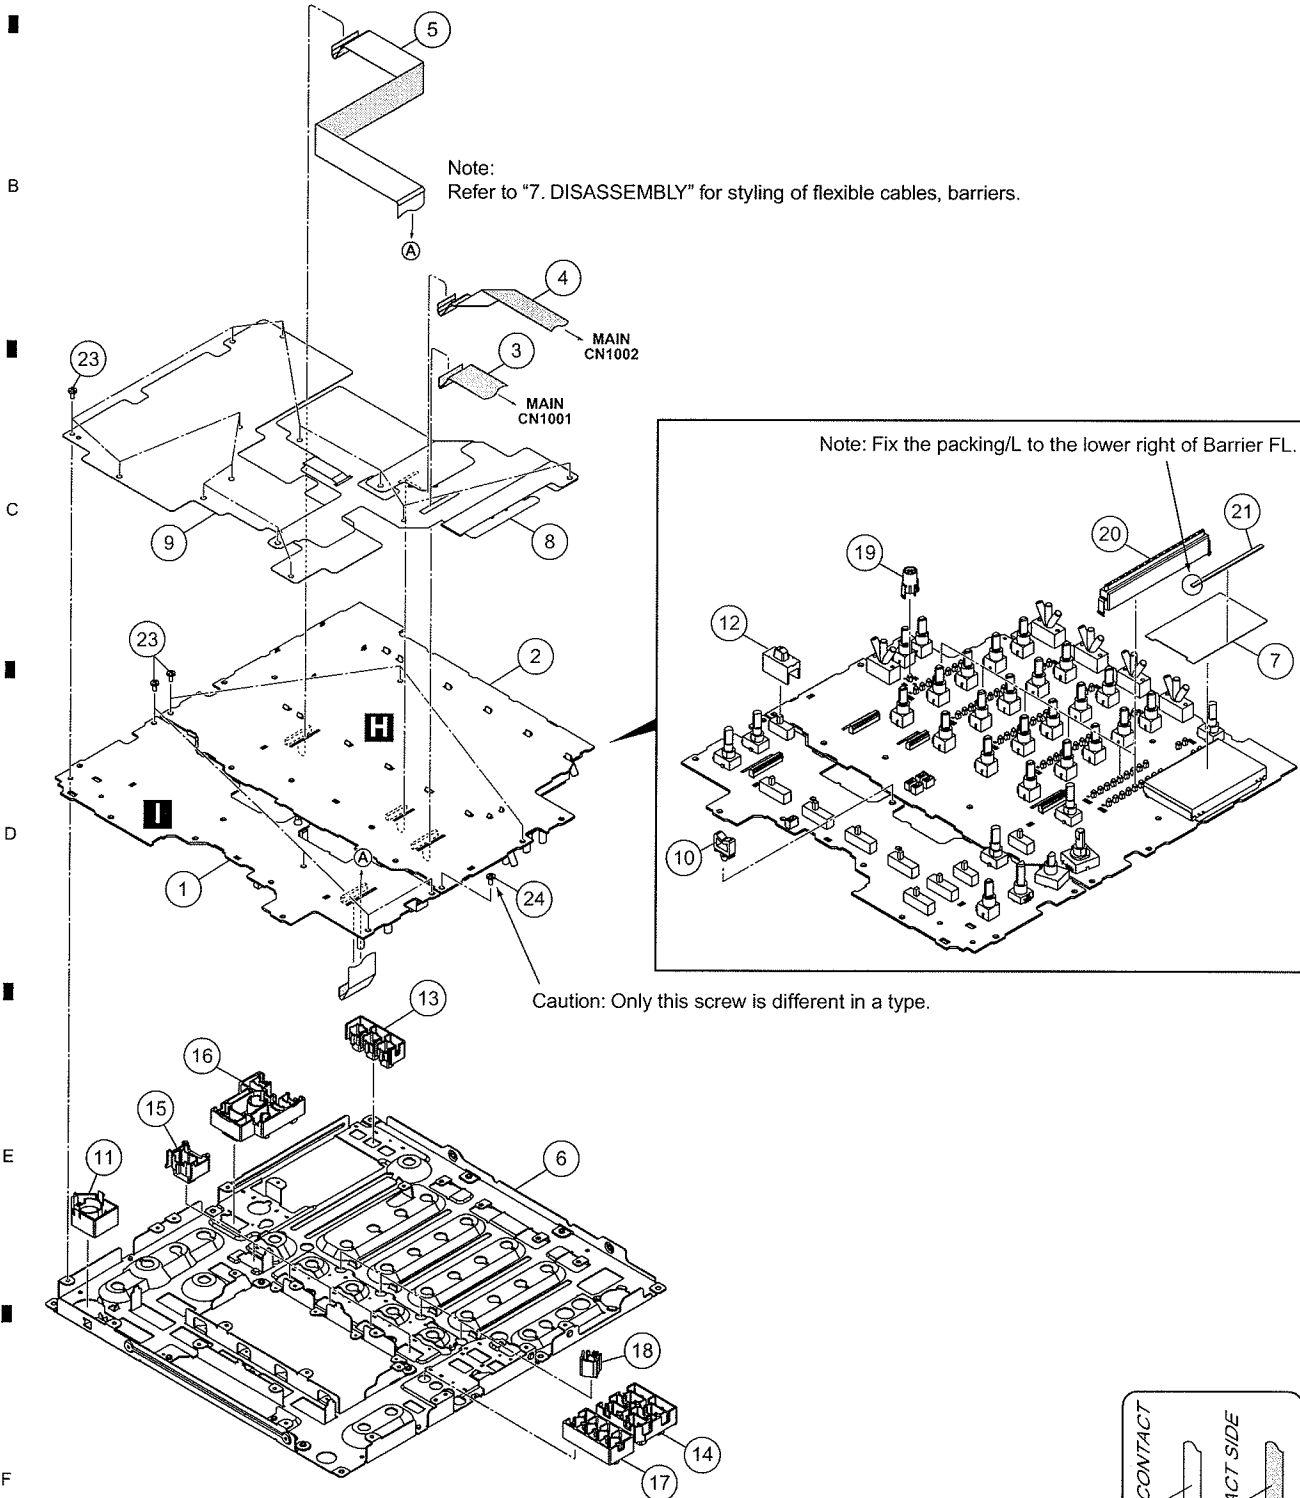

CONTROL PANEL SECTION (2/2) PARTS LIST

Mark No.	Description	Part No.	
1	PNLB Assy	DWX3365	A
2	PNLA Assy	DWX3359	
3	FFC/24P	DDD1599	
4	FFC/17P	DDD1600	
5	FFC/27P	DDD1601	
6	Panel Stay	DND1272	
7	Barrier FL	DEC3351	
8	Barrier/PNL	DMR1007	
9	Barrier/A	DMR1009	
10	Wire Saddle	XEC3100	
11	Effect Knob	DAC2304	B
12	Slide SW Cap	DAC2400	
13	Button (MIDI)	DAC2655	
14	Button/CFX	DAC2837	
15	Button/CUE	DAC2838	
16	Button/TAP	DAC2839	
17	Button/FS	DAC2840	
18	Button/BFX	DAC2841	
19	Lens Holder	DNK4533	
20	Lebel Meter Assy	DXB1882	
21	Packing/L	DEC3416	C
22			
23	Screw	BBZ30P060FTC	
24	Screw	PBH30P080FTB	
			D
			E
			F